 
 





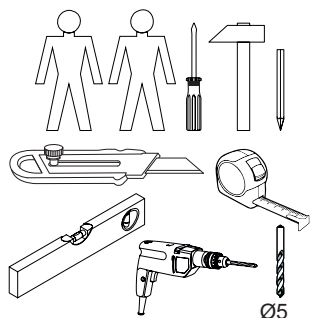


Instrukcja montażowa

DENZEL Szafka pod TV 1D1S/125

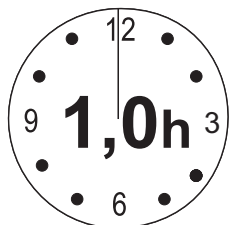

    
Ø5

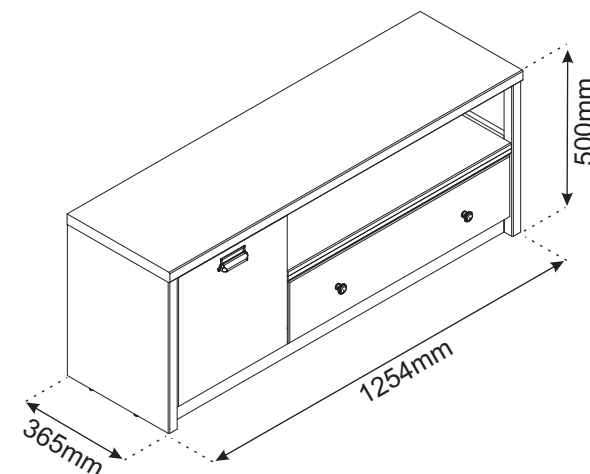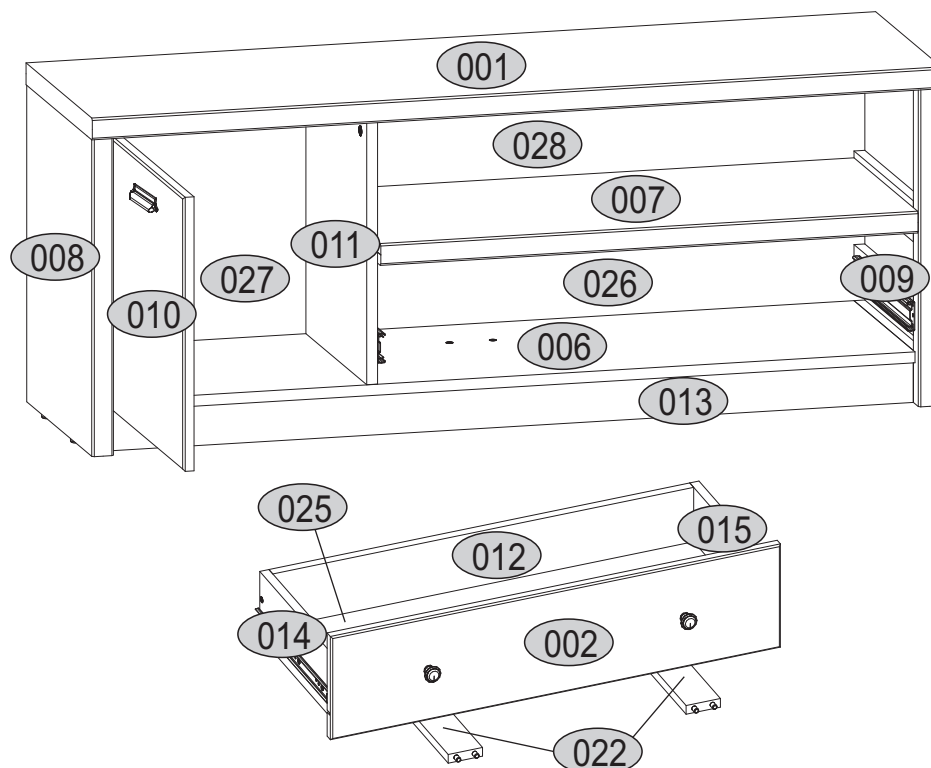
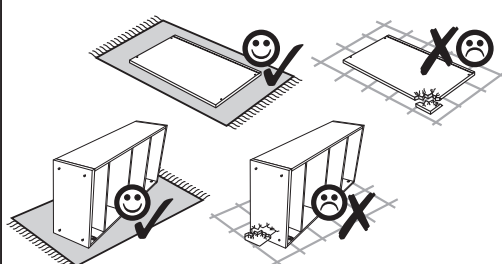
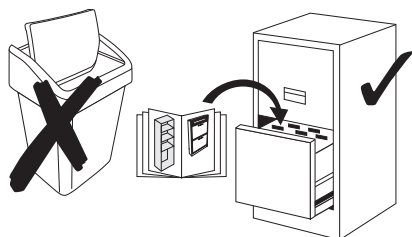


Kod	Wymiary				Pakiet
001	1254	365	16/32	1	1/1
002	787	190	16	1	1/1
006	1188	336	16	1	1/1
007	793	353	16/32	1	1/1
008	464	361	16/32	1	1/1
009	464	361	16/32	1	1/1
010	392	401	16	1	1/1
011	388	335	16	1	1/1
012	736	120	16	1	1/1
013	1188	60	16	1	1/1
014	300	120	16	1	1/1
015	300	120	16	1	1/1
022	284	60	16	2	1/1
024	100	60	16	1	1/1
025	300	754	2,5	1	1/1
026	213	824	2,5	1	1/1
027	425	411	2,5	1	1/1
028	211	824	2,5	1	1/1
Akcesoria				1	1/1

Accessories:


2x c44 	37x f1 Ø8x30 	20x p25 Ø3.5x16 	18x r1 15x12 
18x r16 Ø5x24 	6x e1 Ø7x50 	4x j1 	2x a143 
1x lb-300 	2x b119 	4x n260.01 	2x b8 
8x s2 	1x z1 	4x e23 	1x c12 
5x k1 	25x l1 	2x s1 	2x m35 

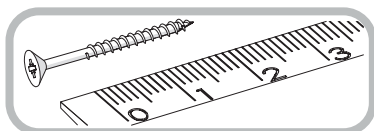 

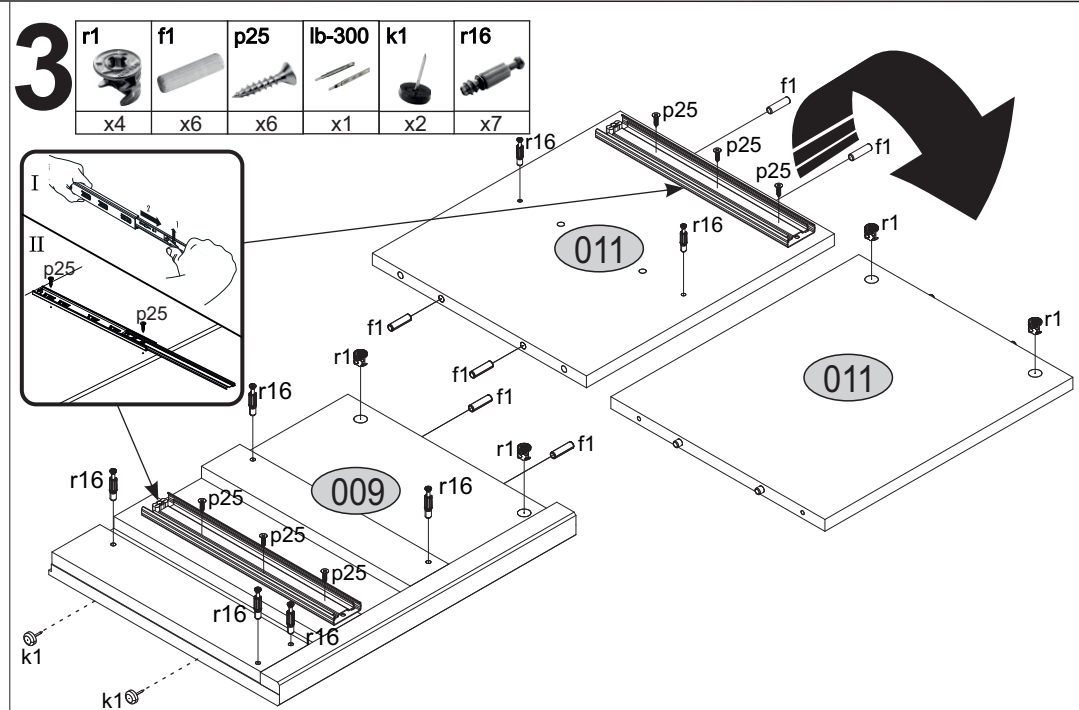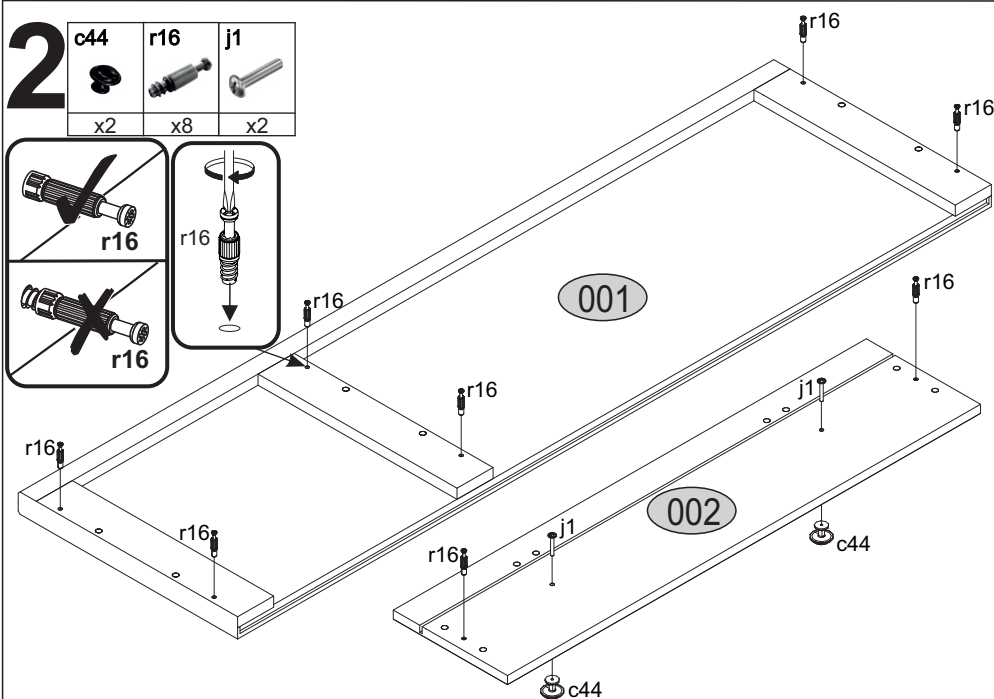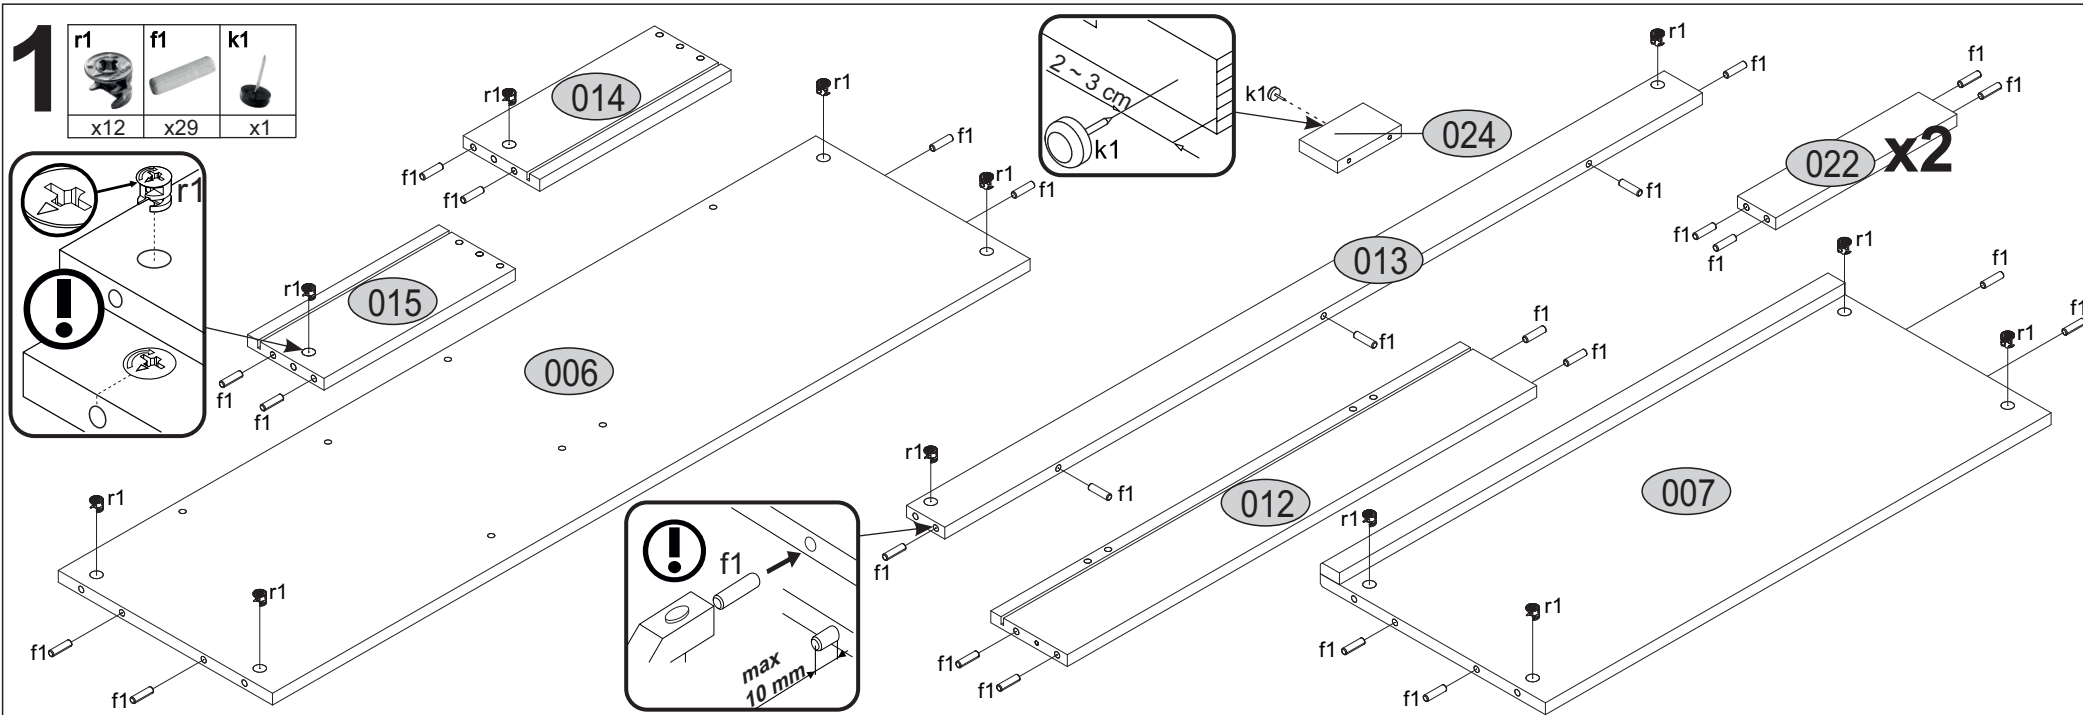   


4

c12	j1	b119	e23	b8	k1	r1	f1	r16	a143	p25
x1	x2	x2	x4	x2	x2	x2	x2	x3	x2	x4

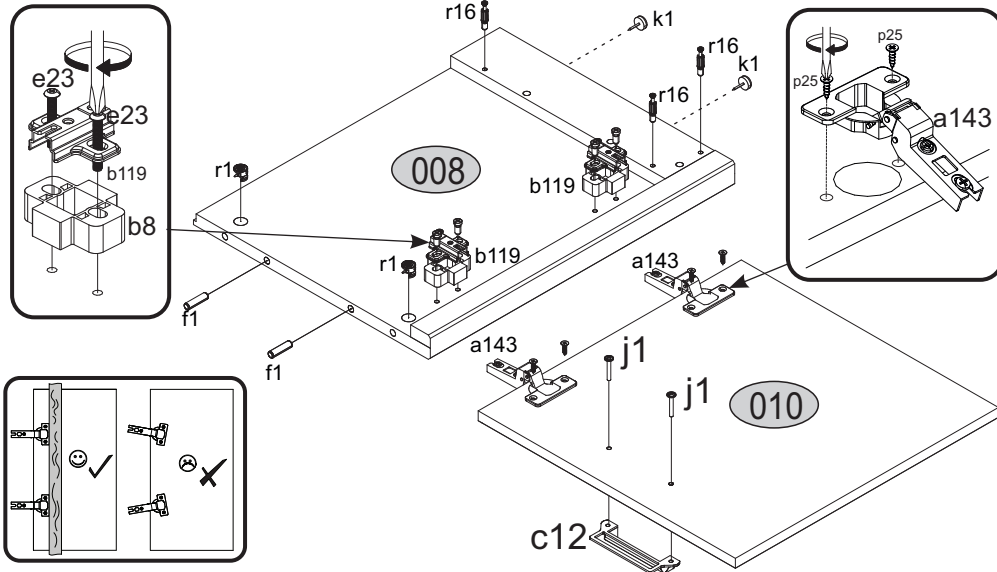 


5

 e1
x2

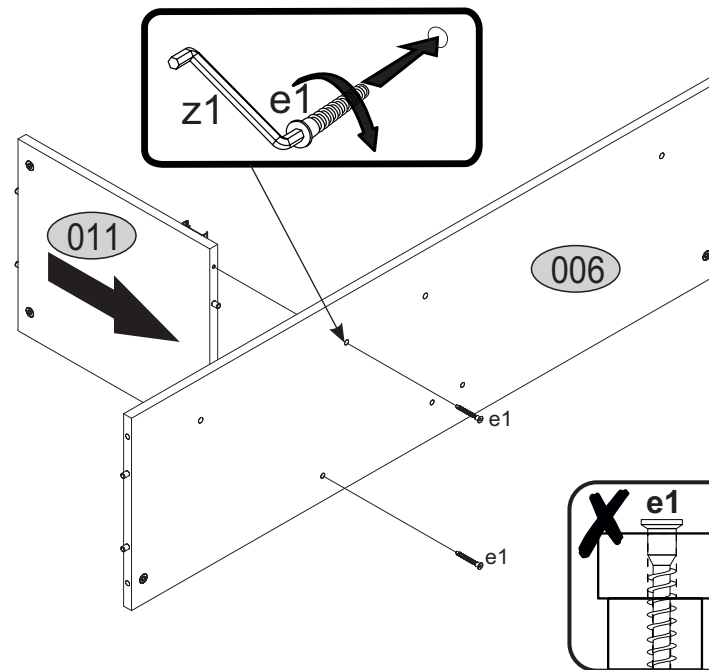


6

 
e1
x2

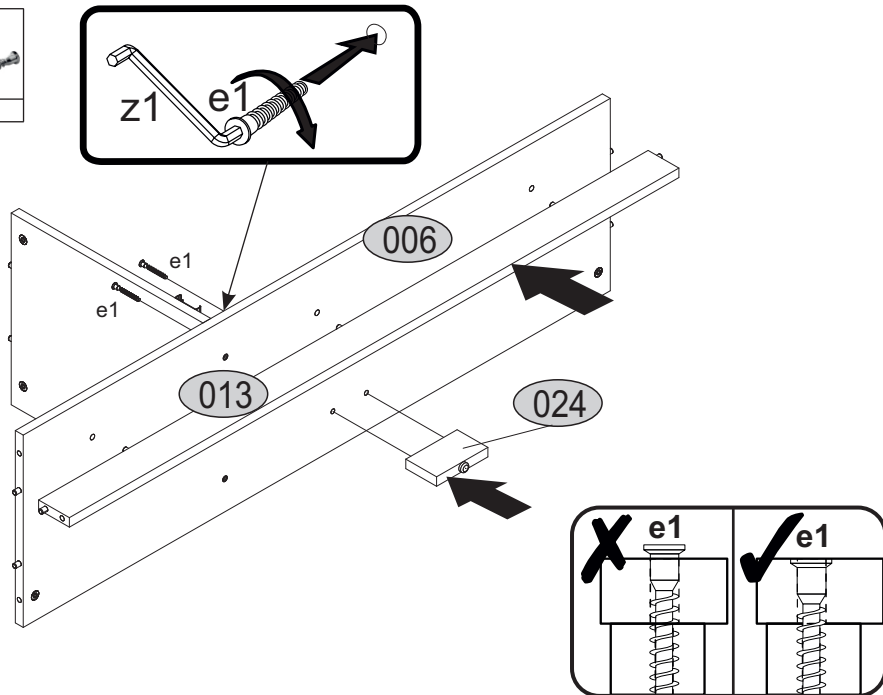


7

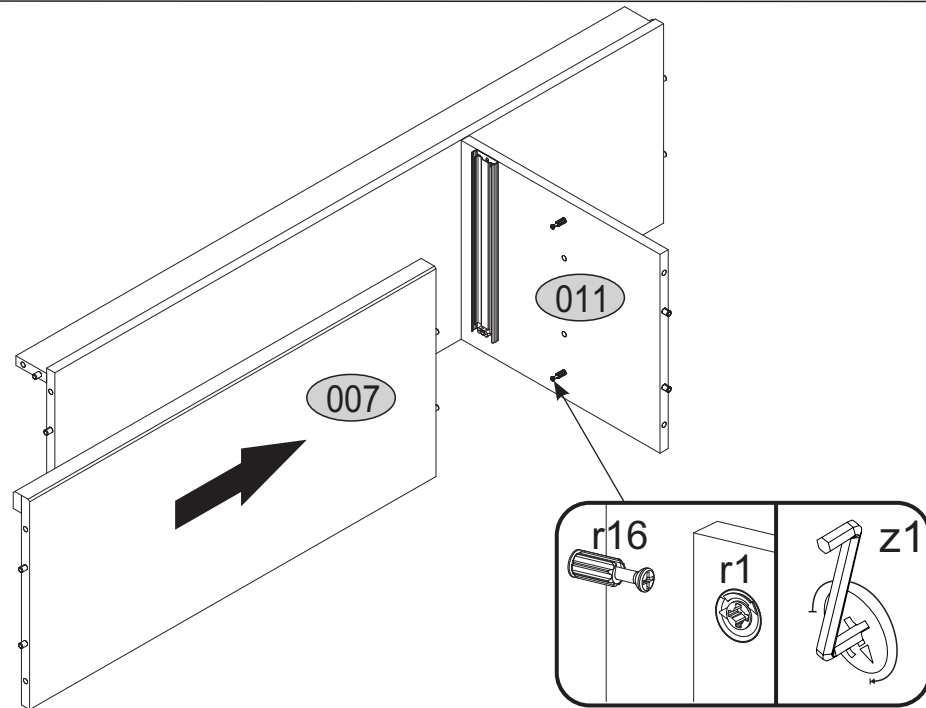 



8

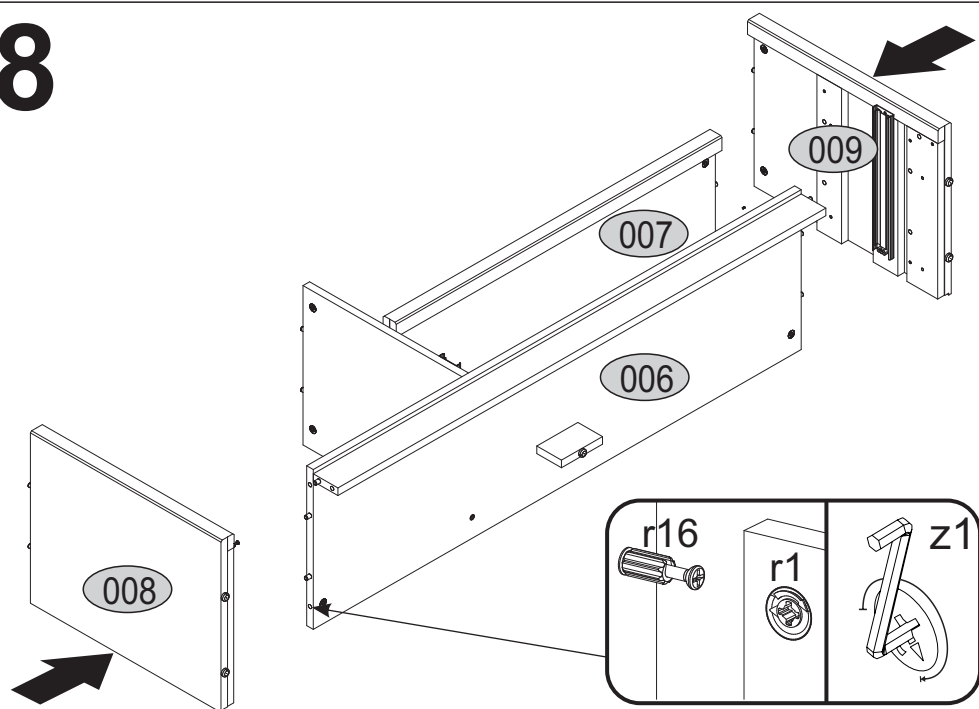 



9

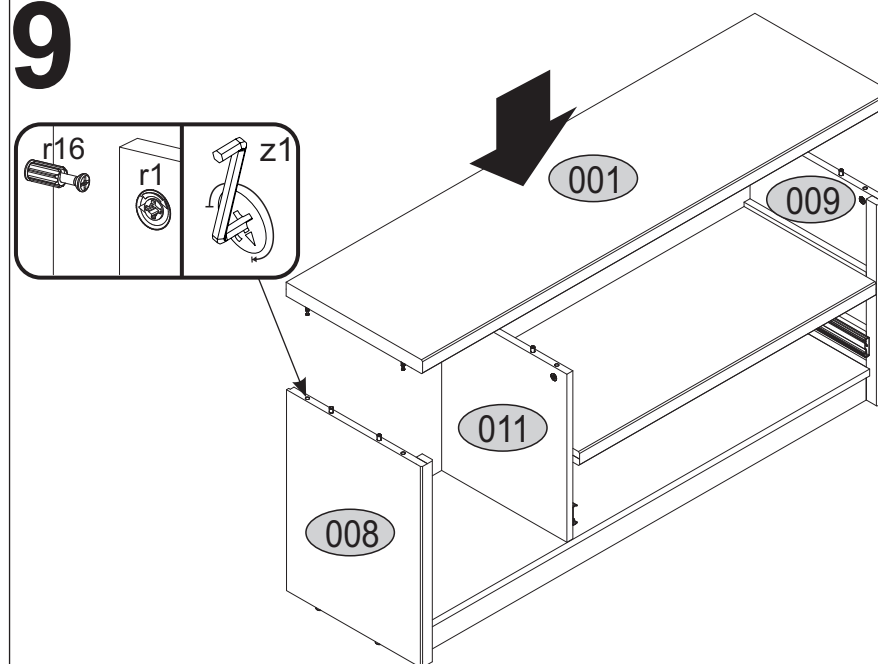 

10




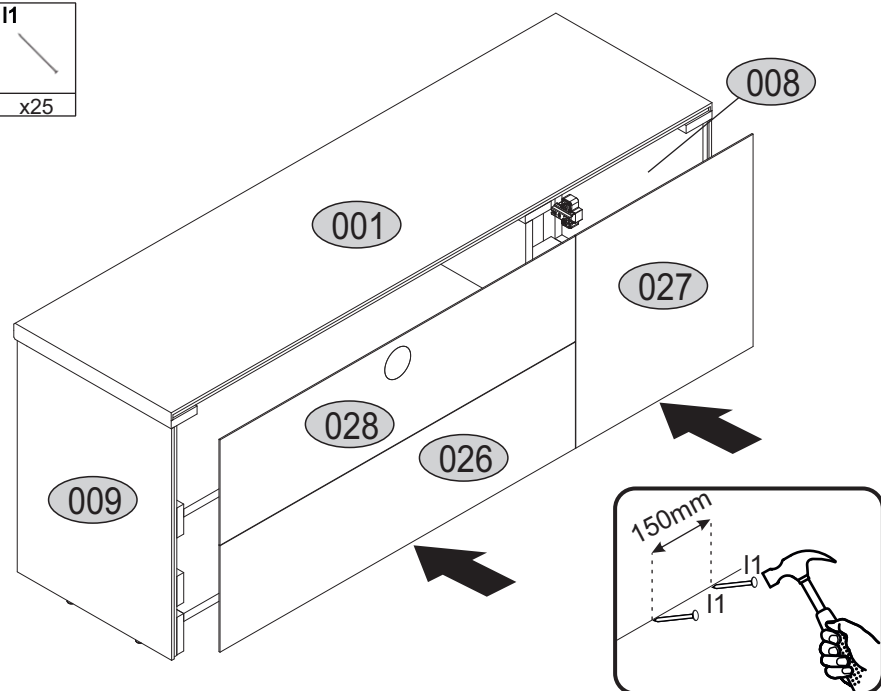 
 


11

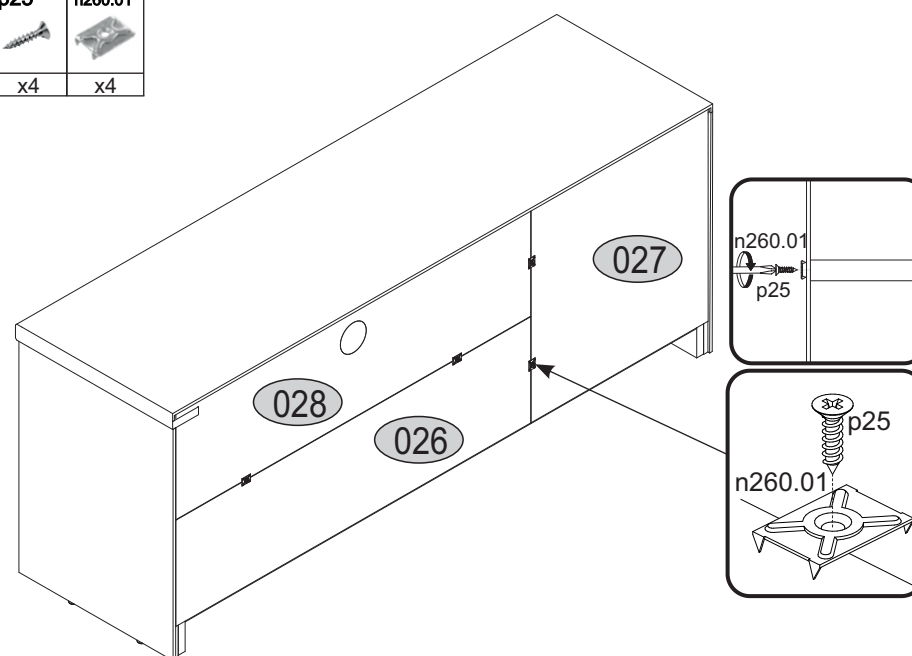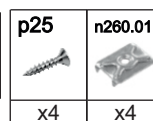  



12

     m35
x2

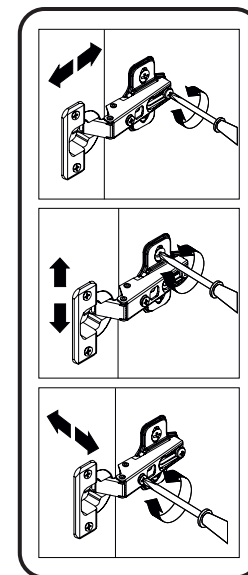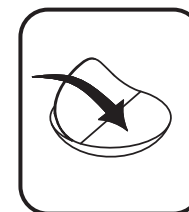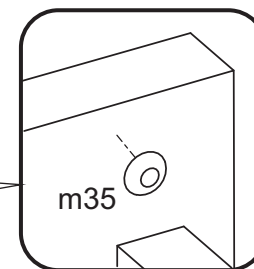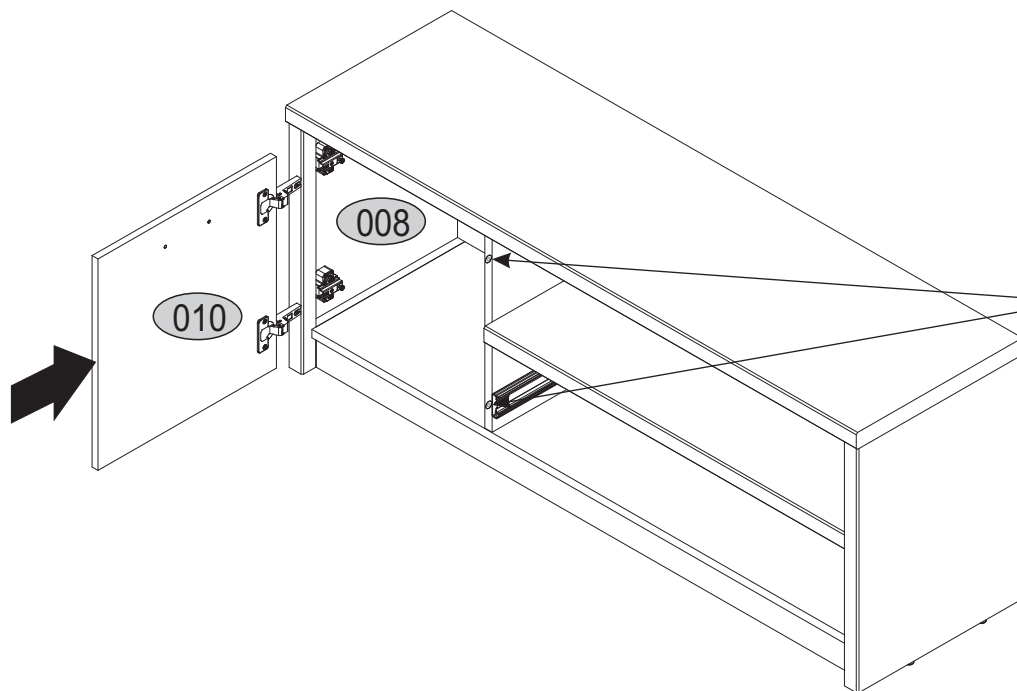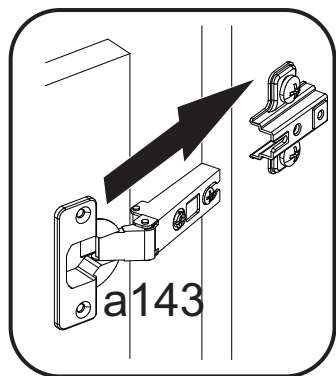


13

  e1
x2

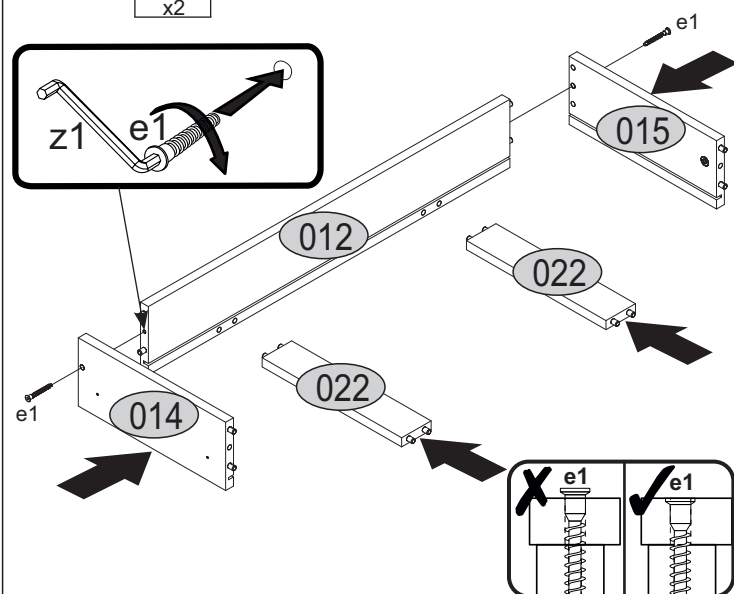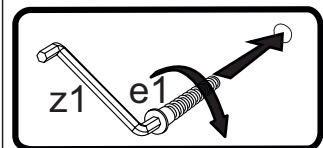


14

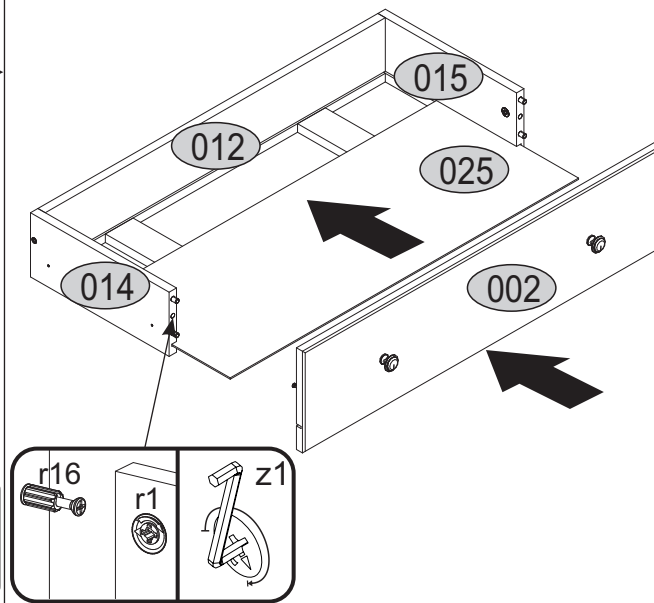 

15

 lb-300 p25
x1 x6

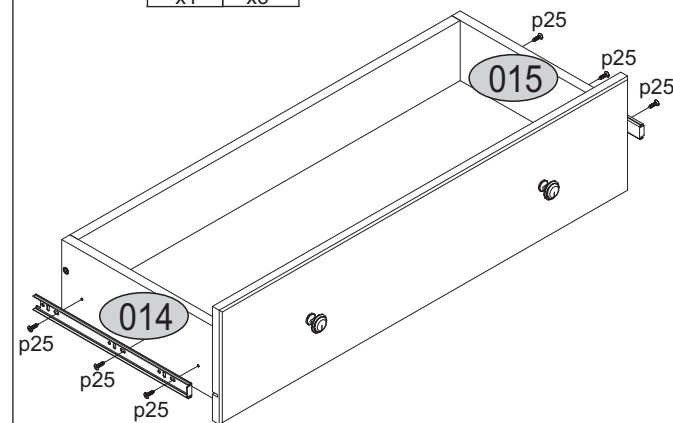

16

s2	s1
	
x8	x2

