

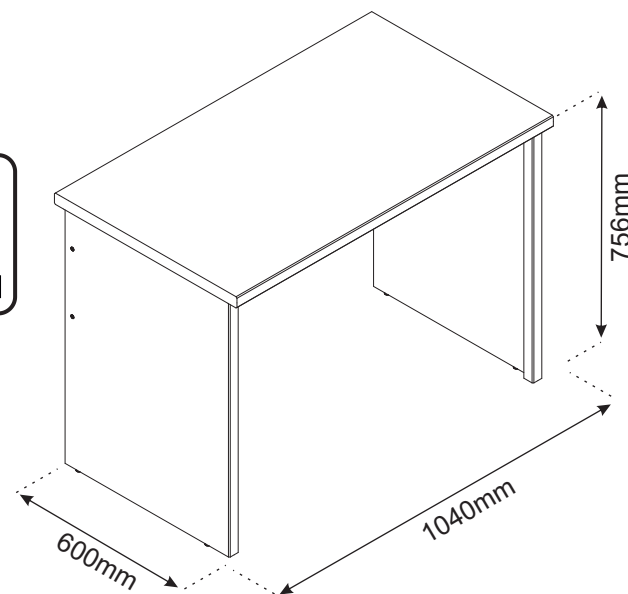
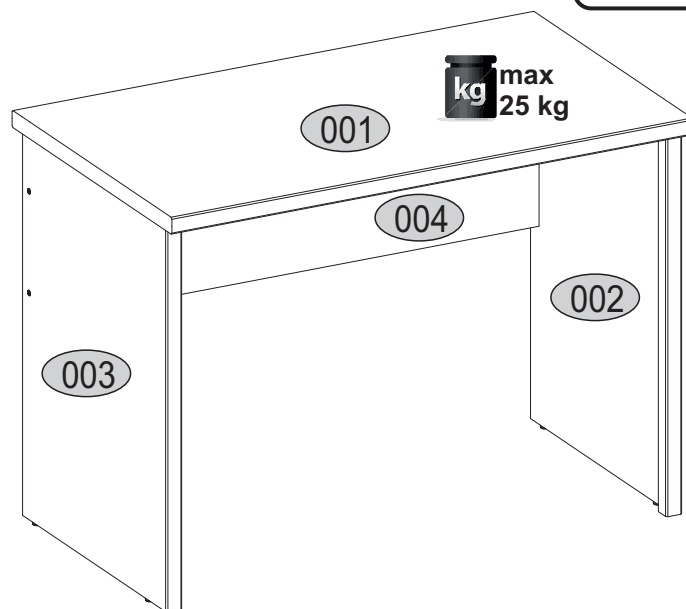



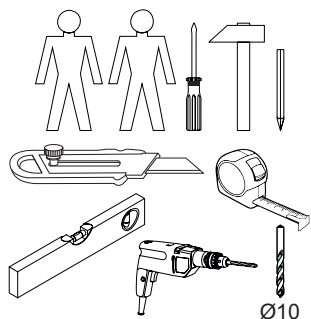


Instrukcja montażowa

DENZEL Biurko

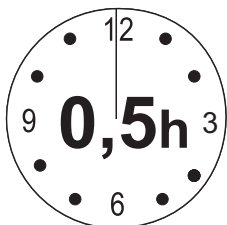


Kod	Wymiary				Pakiet
001	1040	600	16/32	1	1/1
002	724	540	16/32	1	1/1
003	724	540	16/32	1	1/1
004	300	998	16	1	1/1
Akcesoria				1	1/1

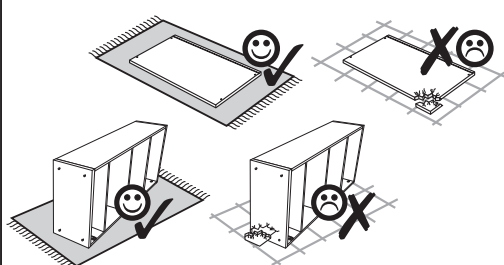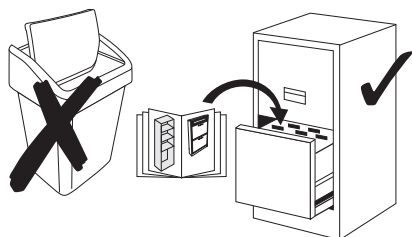







Akcesoria:

8x f1 Ø8x30		4x r1 15x12		4x r16 Ø5x24		4x e1 Ø7x50	
4x s2		1x z1		4x s1		4x k1	

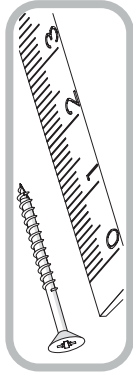




1

r1	f1	r16	k1
x4	x8	x4	x4

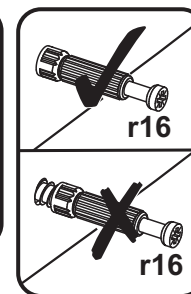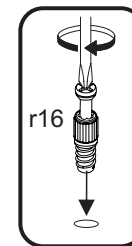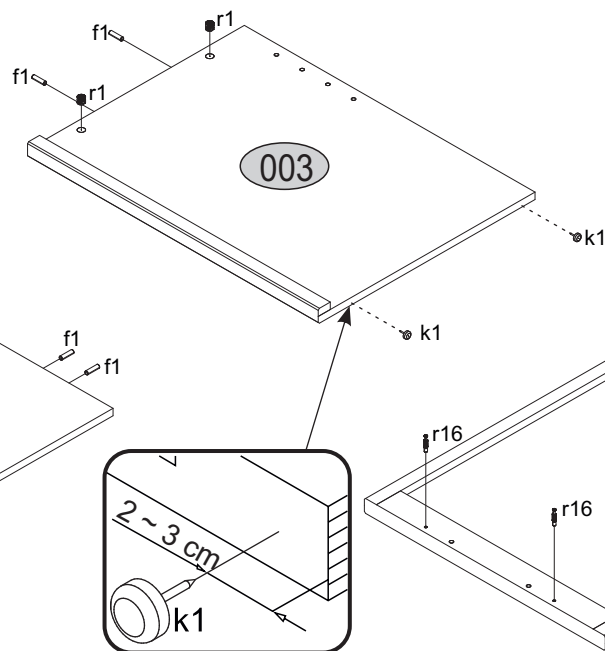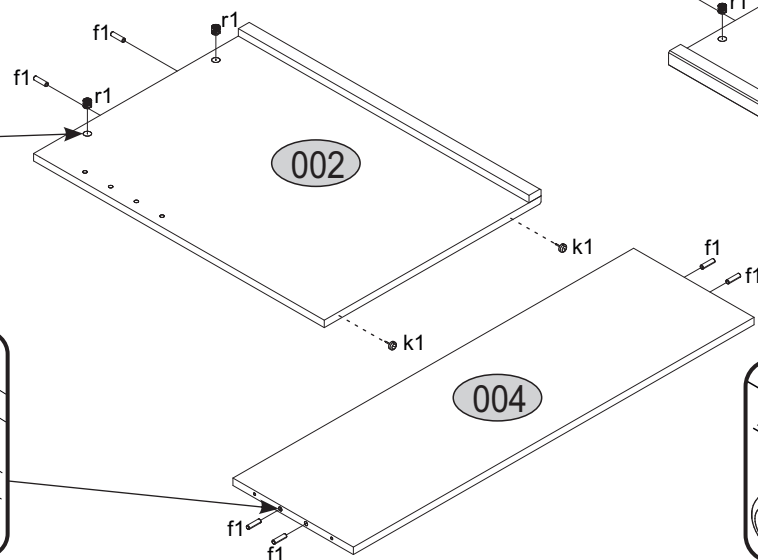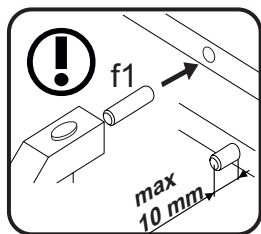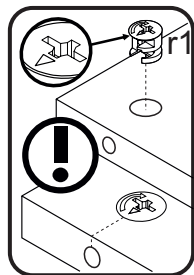

2

e1
x4

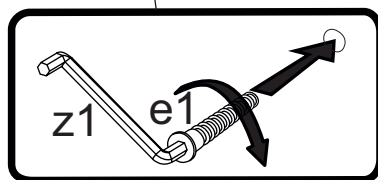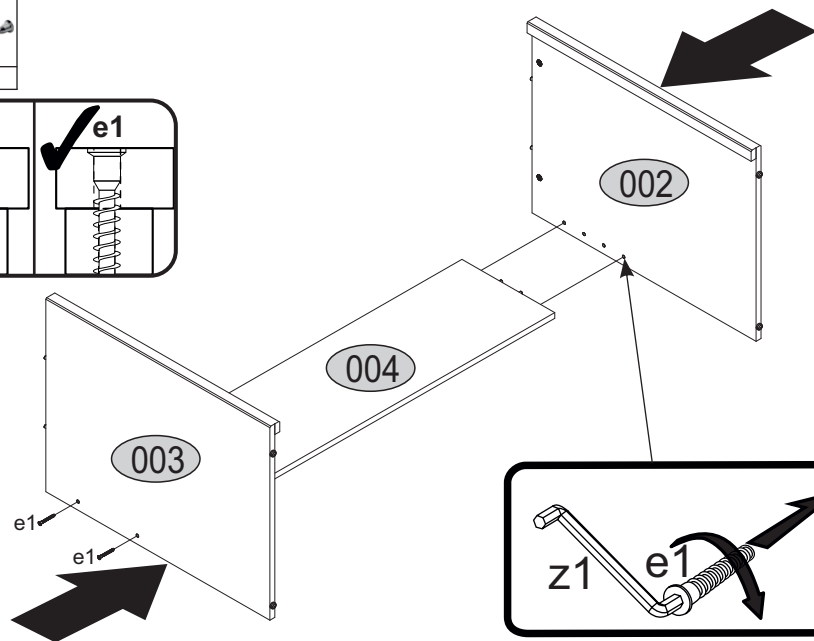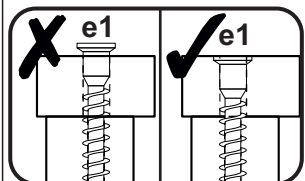

3

s2	s1
x4	x4

