
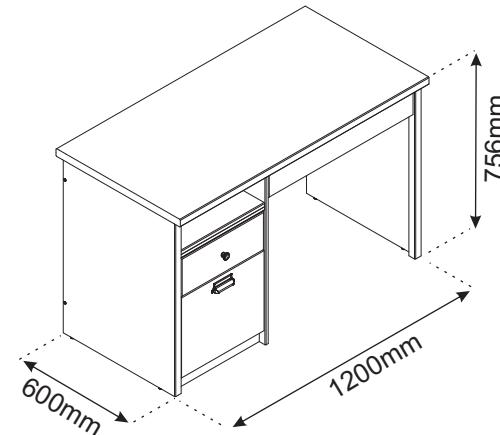
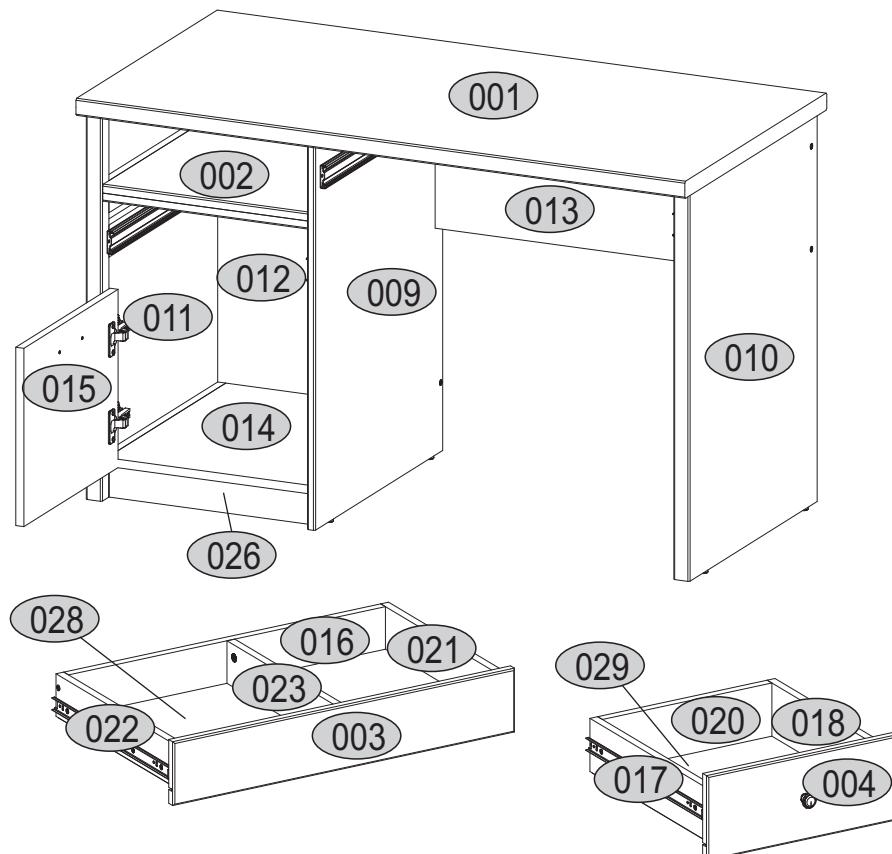







# Instrukcja montażowa DENZEL Biurko 1D2S/120





Kod	Wymiary				Pakiet
001	1200	600	16/32	1	1/2
002	404	518	16	1	2/2
003	700	120	16	1	1/2
004	398	160	16	1	2/2
009	740	538	16	1	1/2
010	724	540	16/32	1	2/2
011	724	540	16/32	1	2/2
012	723	420	16	1	1/2
013	300	722	16	1	2/2
014	404	503	16	1	2/2
015	398	333	16	1	1/2
016	649	80	16	1	2/2
017	400	100	16	1	1/2
018	400	100	16	1	1/2
020	347	100	16	1	1/2
021	400	80	16	1	1/2
022	400	80	16	1	1/2
023	80	384	16	1	1/2
026	404	60	16	1	1/2
028	406	675	2,5	1	1/2
029	406	373	2,5	1	1/2
Akcesoria				1	1/2

## Akcesoria:



40x f1  Ø8x30	22x r1  15x12	22x r16  Ø5x24	12x e1  Ø7x50
6x k1 	4x e23 	35x p25  Ø3.5x16	1x c12 
7x l2 	2x lb400 	2x b119 	1x c44 
2x a143 	3x j1 	10x s1 	2x b8 
10x s2 	1x z1 	16x p52  Ø3x16	

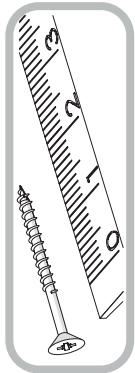

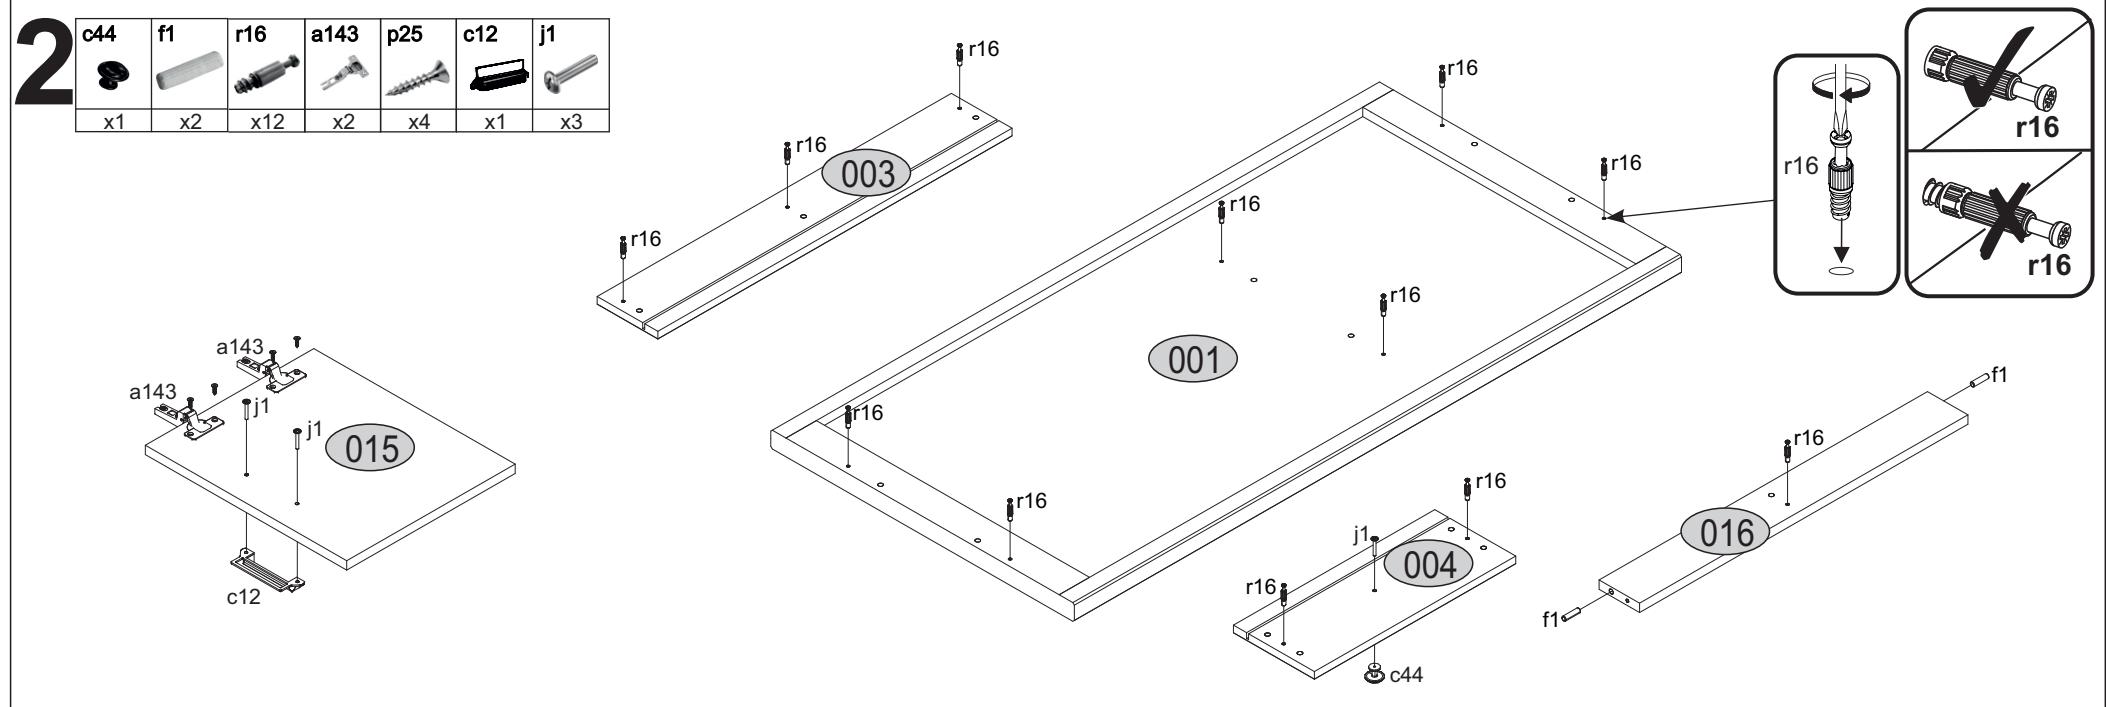
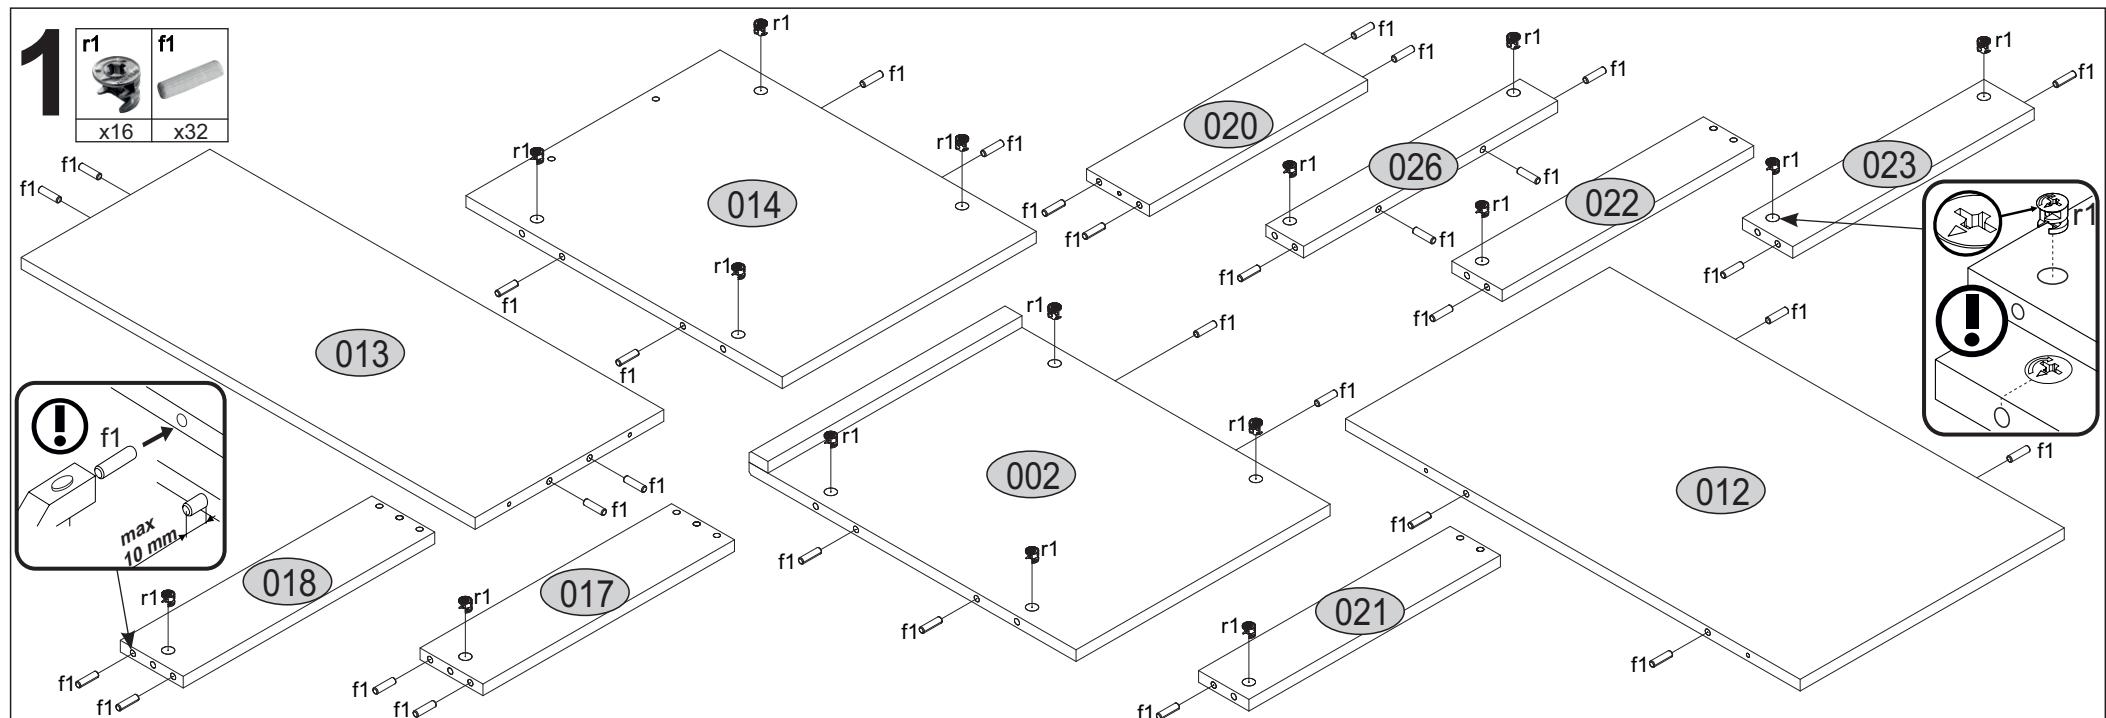







**3**





p25 x12	lb-400 x2	f1 x6	r16 x10	r1 x6	b119 x2	e23 x4	b8 x2	k1 x6
------------	--------------	----------	------------	----------	------------	-----------	----------	----------

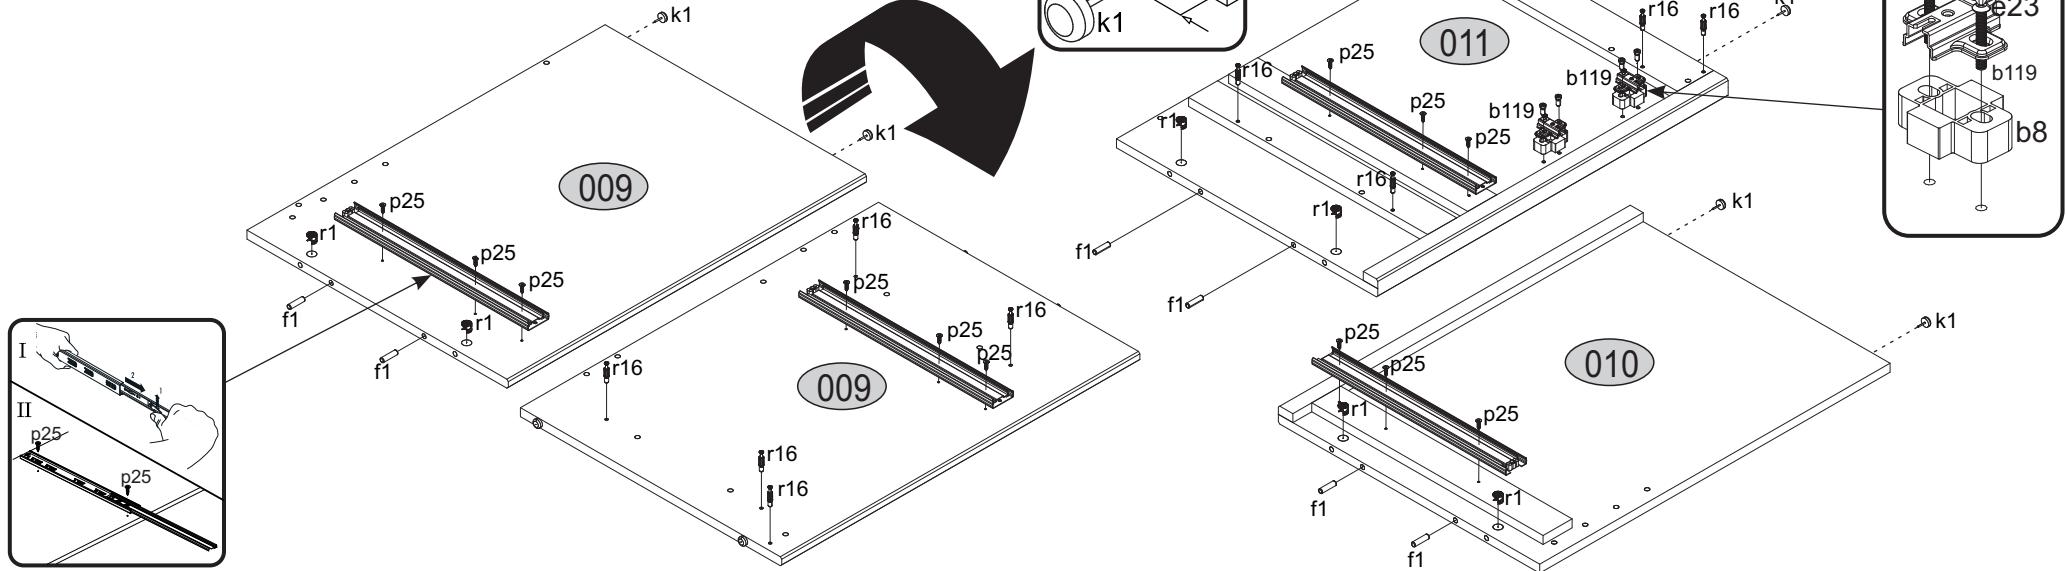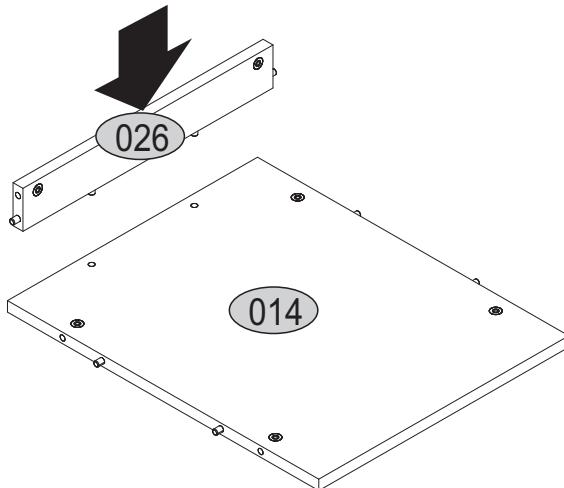**4****5**

e1 x4
----------

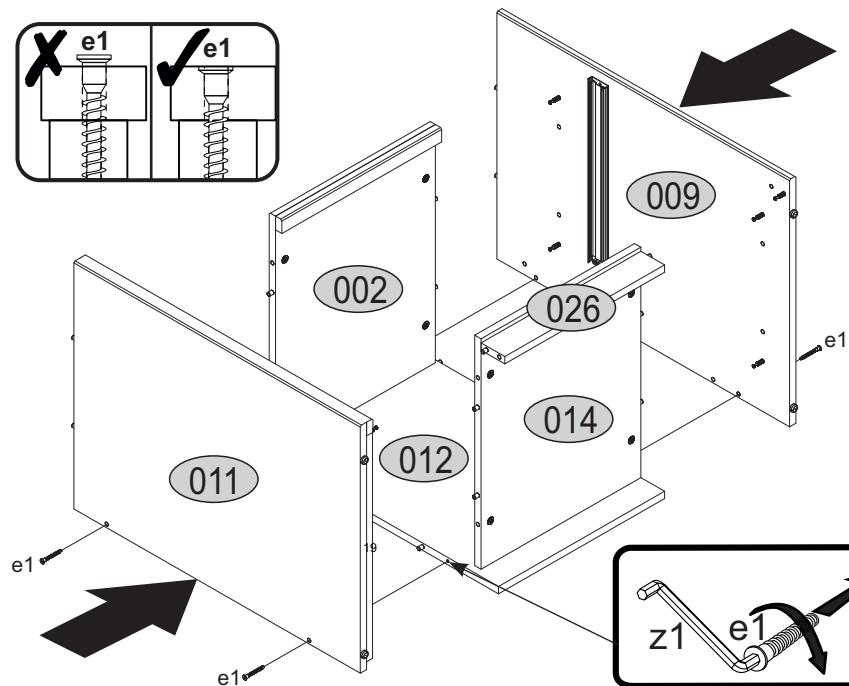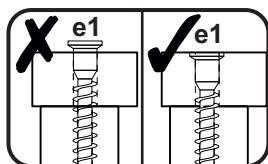

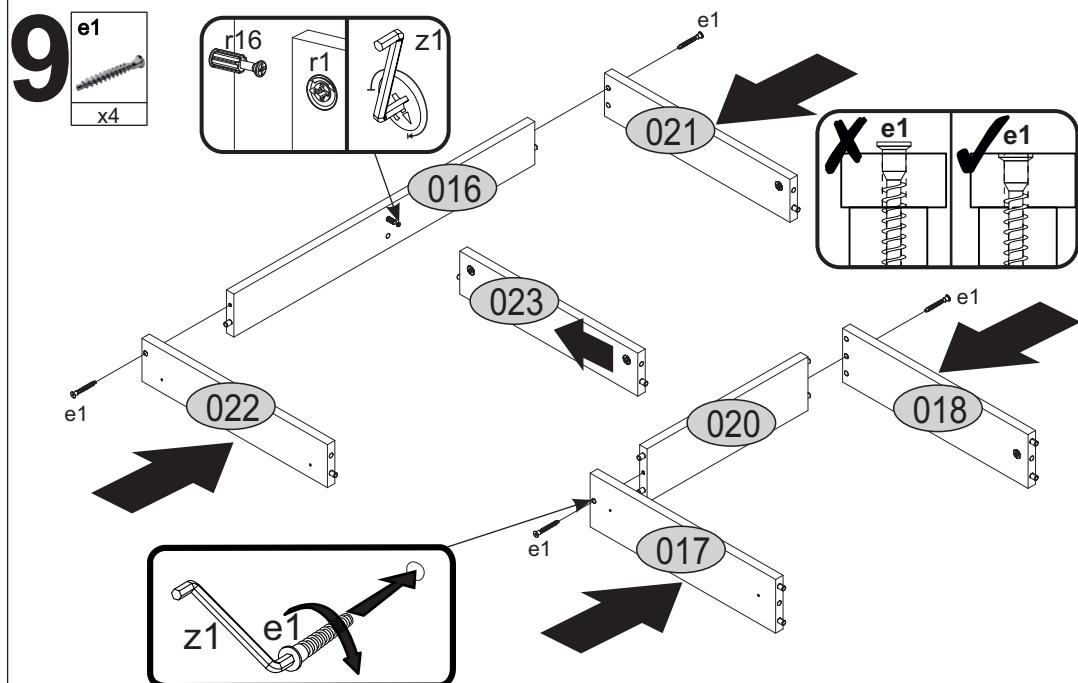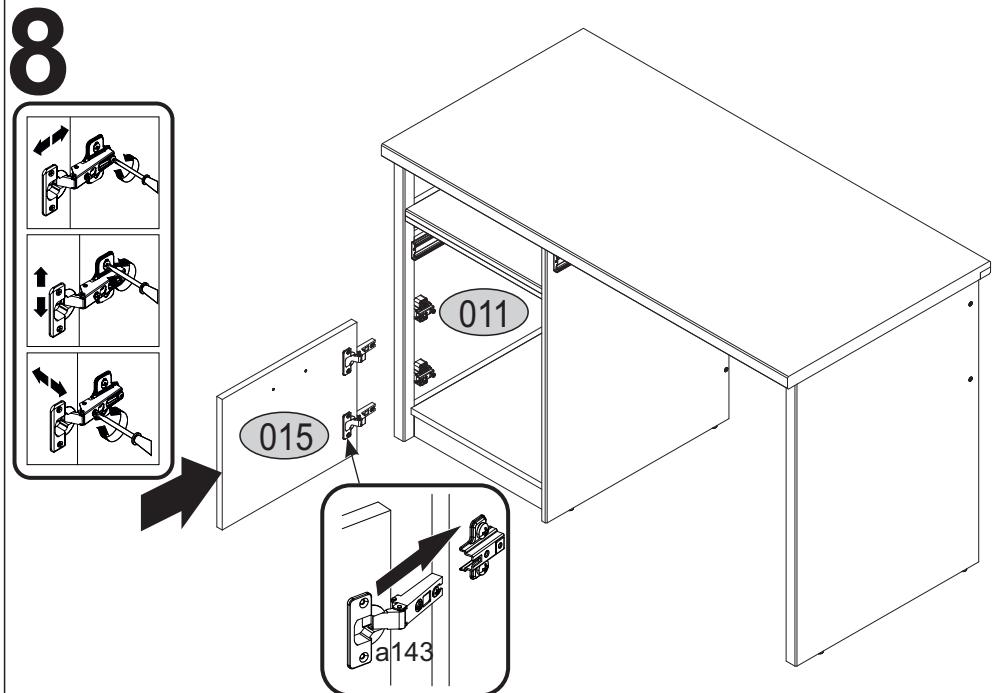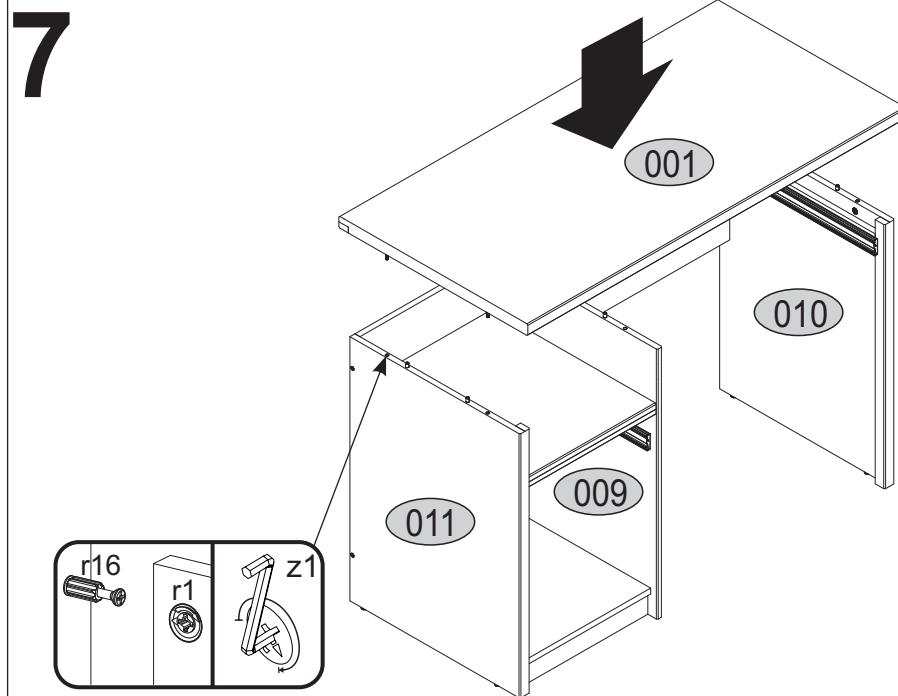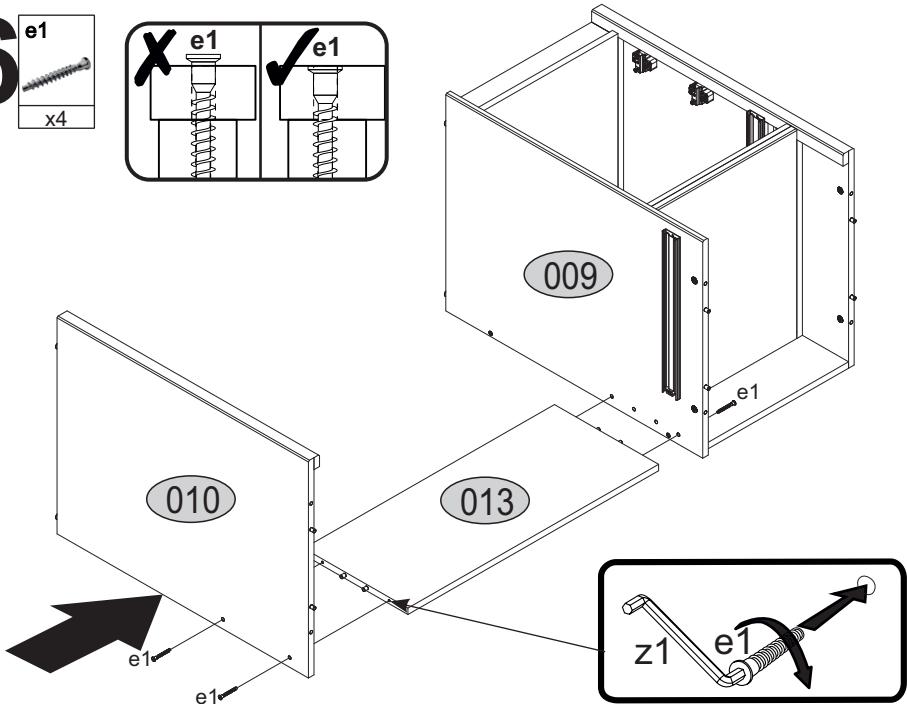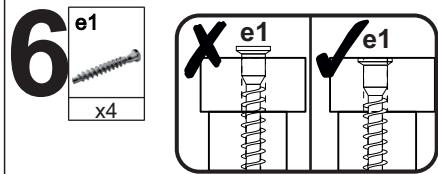

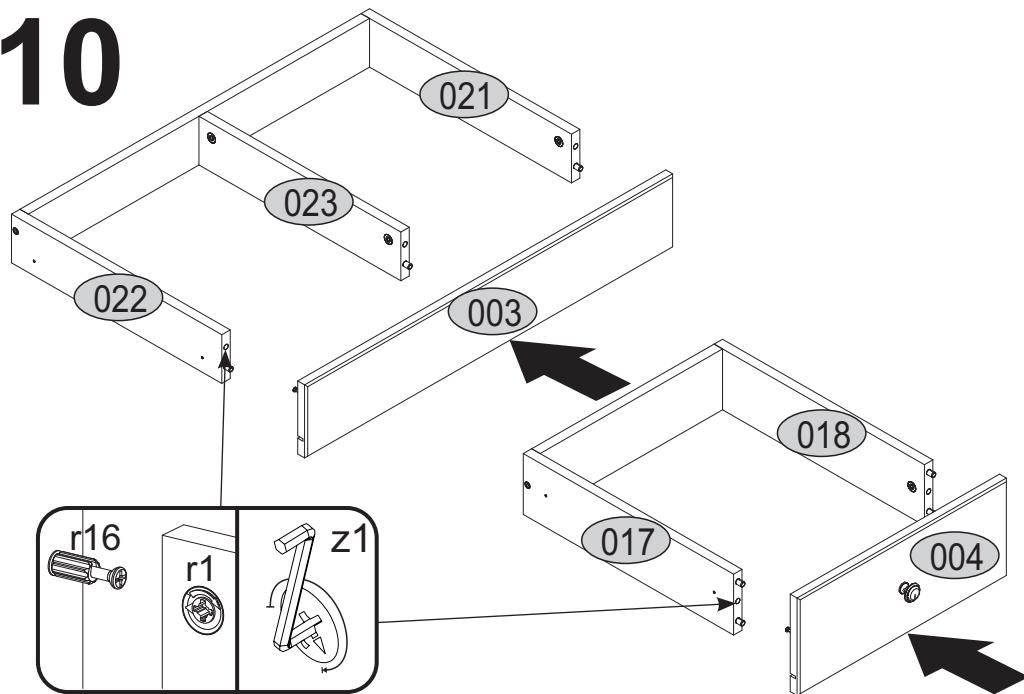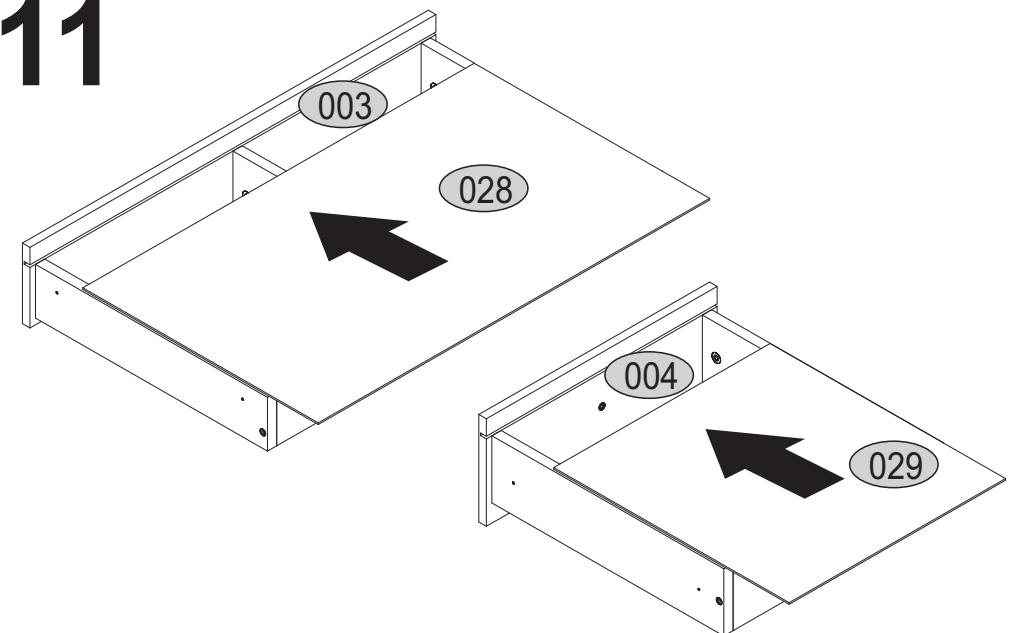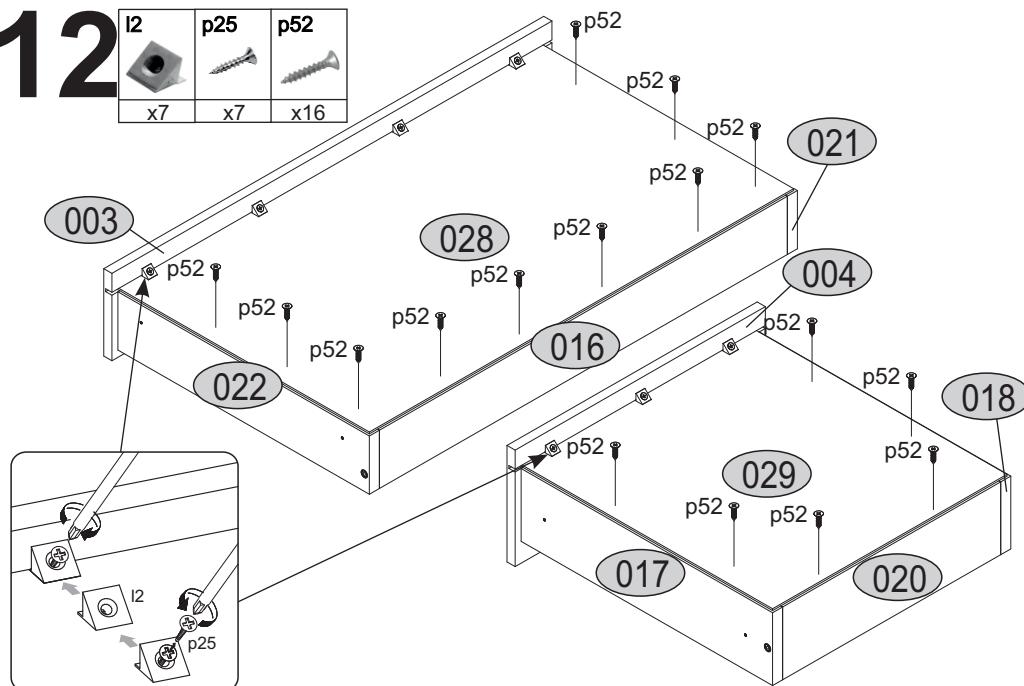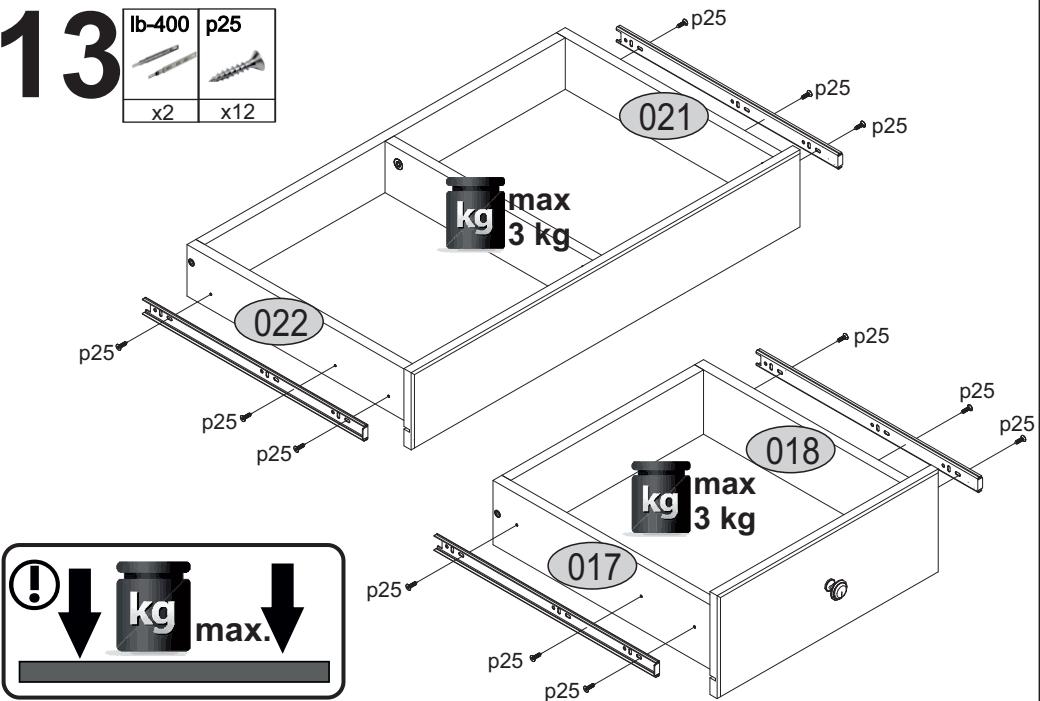**10****11****12****13**

**14**

