

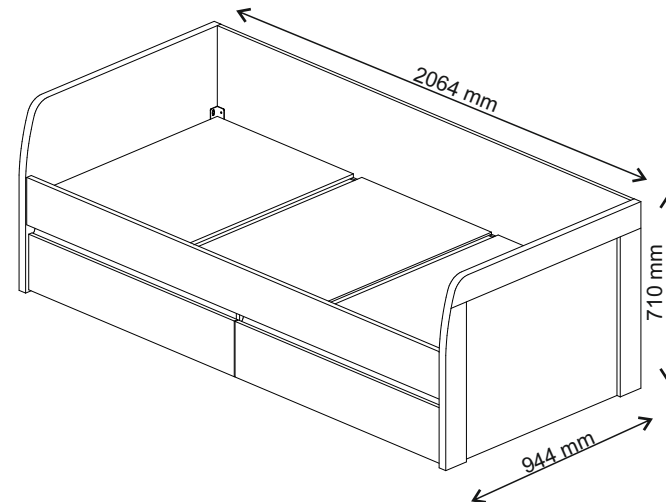
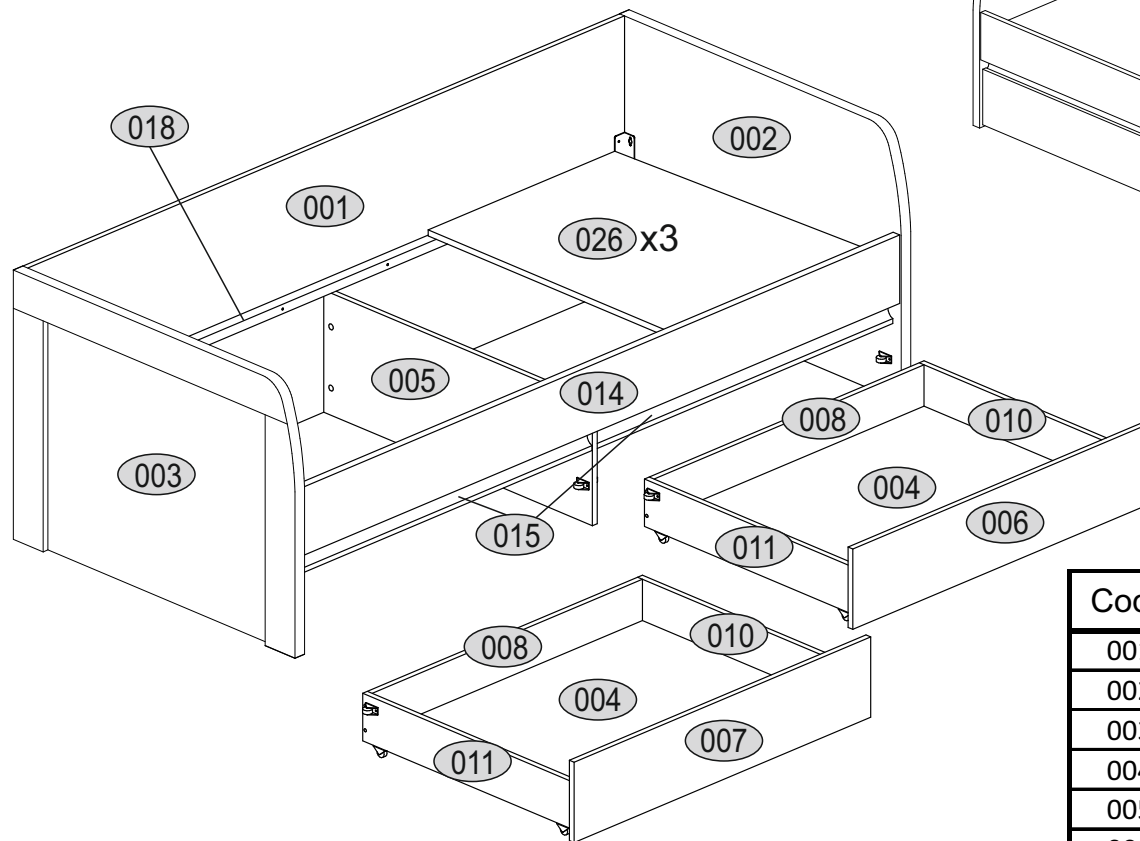
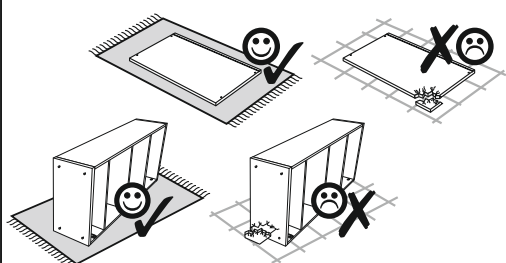
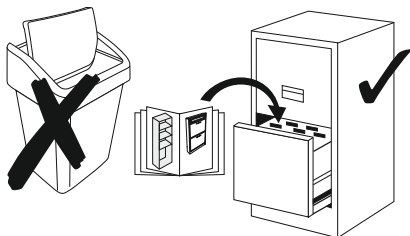


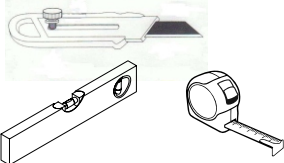


# Installation manual

## ŁÓŻKO 2S/90

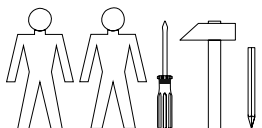


Code	Dimensions				Package
001	2000	702	16	1	3/3
002	944	704	16/32	1	3/3
003	944	704	16/32	1	3/3
004	905	700	16	2	2/3
005	900	319	16	1	2/3
006	994	206	16	1	1/3
007	994	206	16	1	1/3
008	905	124	16	2	2/3
010	716	124	16	2	3/3
011	716	124	16	2	3/3
014	2000	179	22	1	1/3
015	992	70	30	2	1/3
018	1880	30	25	2	1/3
026	898	618	16	3	2/3
<b>accessories</b>					1 3/3


<p><b>x8</b> <b>e1</b> Ø5x50 mm</p> 	<p><b>x8</b> <b>s1</b></p> 	<p><b>x21</b> <b>r1</b> Ø15x12 mm</p> 	<p><b>x4</b> <b>r3</b> Ø15x15 mm</p> 
<p><b>x25</b> <b>r16</b></p> 	<p><b>x25</b> <b>s2</b></p> 	<p><b>x43</b> <b>f1</b> Ø8x30 mm</p> 	<p><b>x32</b> <b>e2</b> Ø6.3x13 mm</p> 
<p><b>x16</b> <b>k34</b></p> 	<p><b>x4</b> <b>n63</b></p> 	<p><b>x48</b> <b>p25</b> Ø3.5x16 mm</p> 	<p><b>x12</b> <b>p21</b> Ø4x30 mm</p> 
<p><b>x4</b> <b>n221</b></p> 	<p><b>x6</b> <b>p62</b> Ø4x45 mm</p> 	<p><b>x8</b> <b>k1</b></p> 	<p><b>x1</b> <b>z1</b></p> 
<p><b>x2</b> <b>f6</b> Ø8x50 mm</p> 	<p><b>x6</b> <b>p10</b> Ø4x40 mm</p> 		

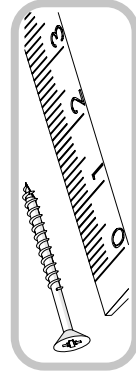


# 1

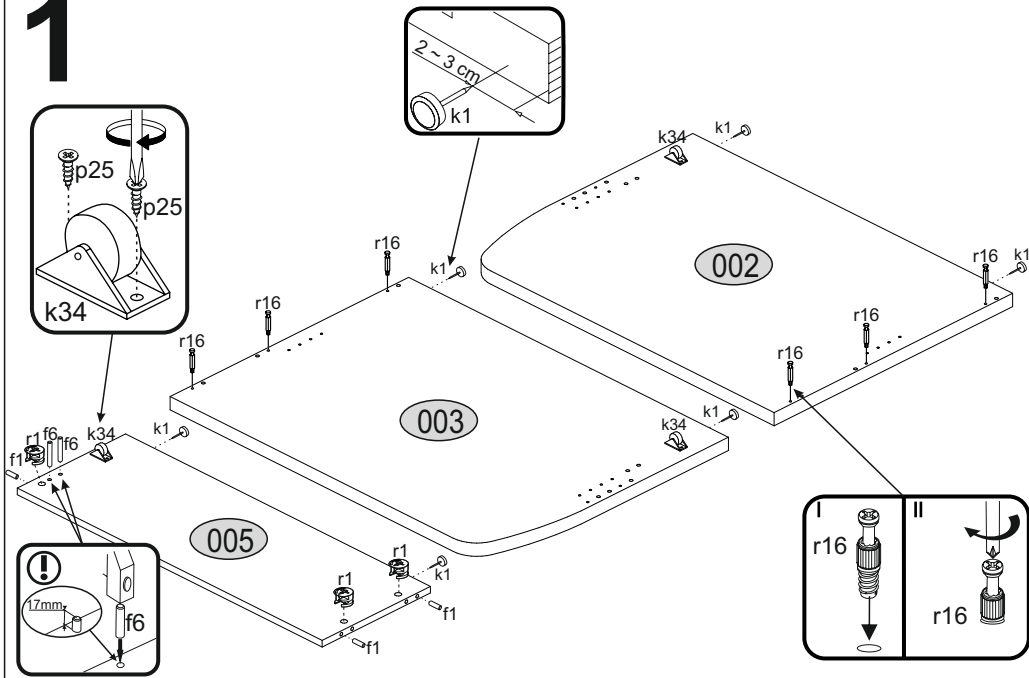


# 2

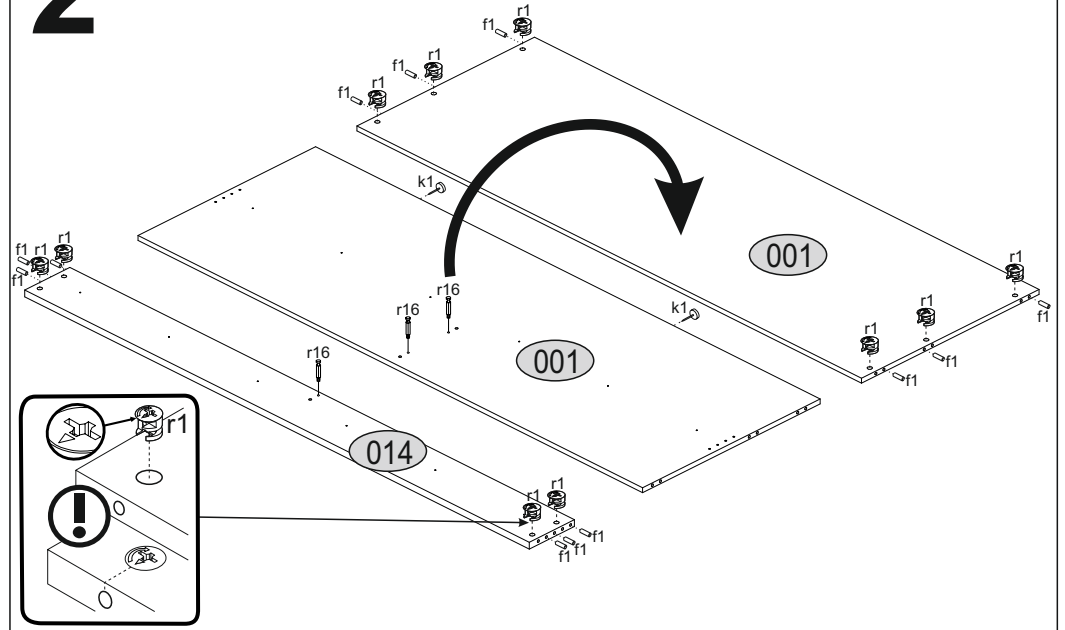


# 3

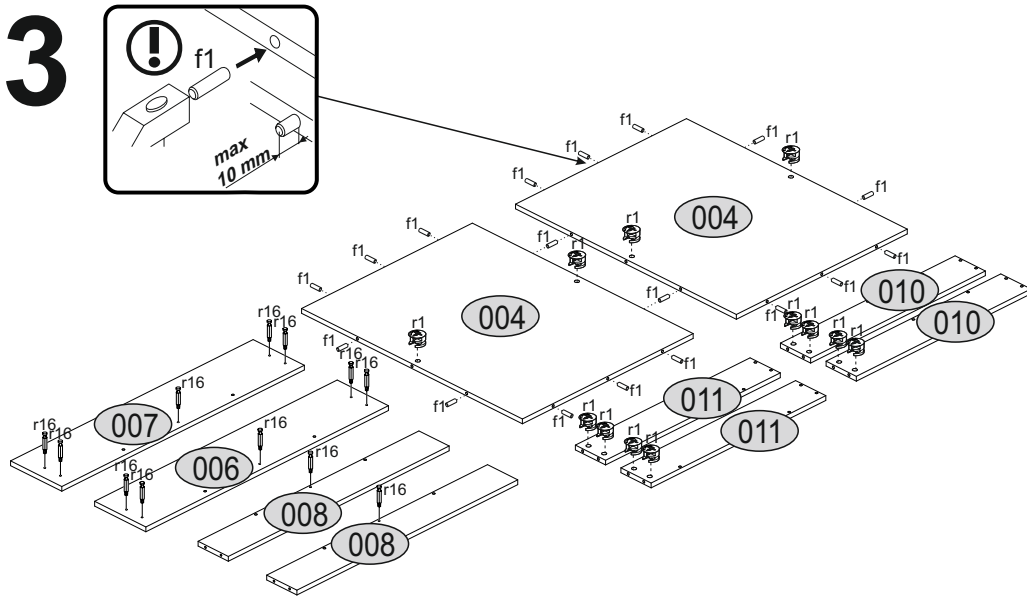


# 4

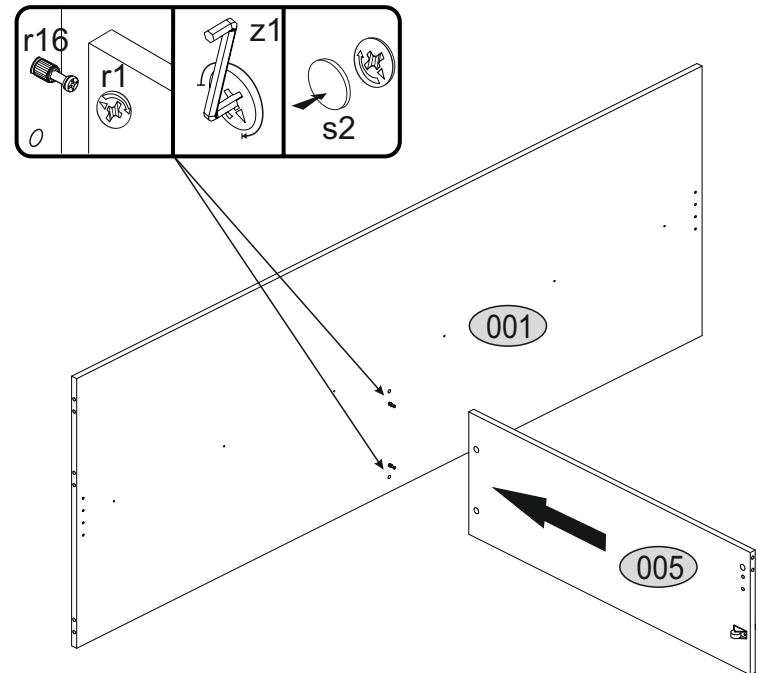


# 5

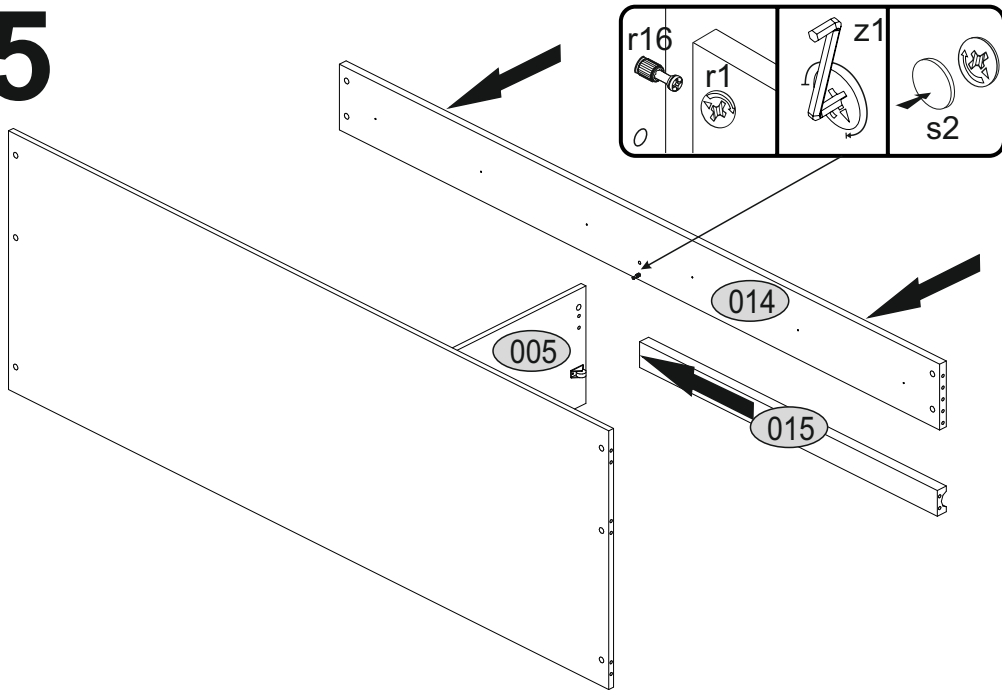


# 6

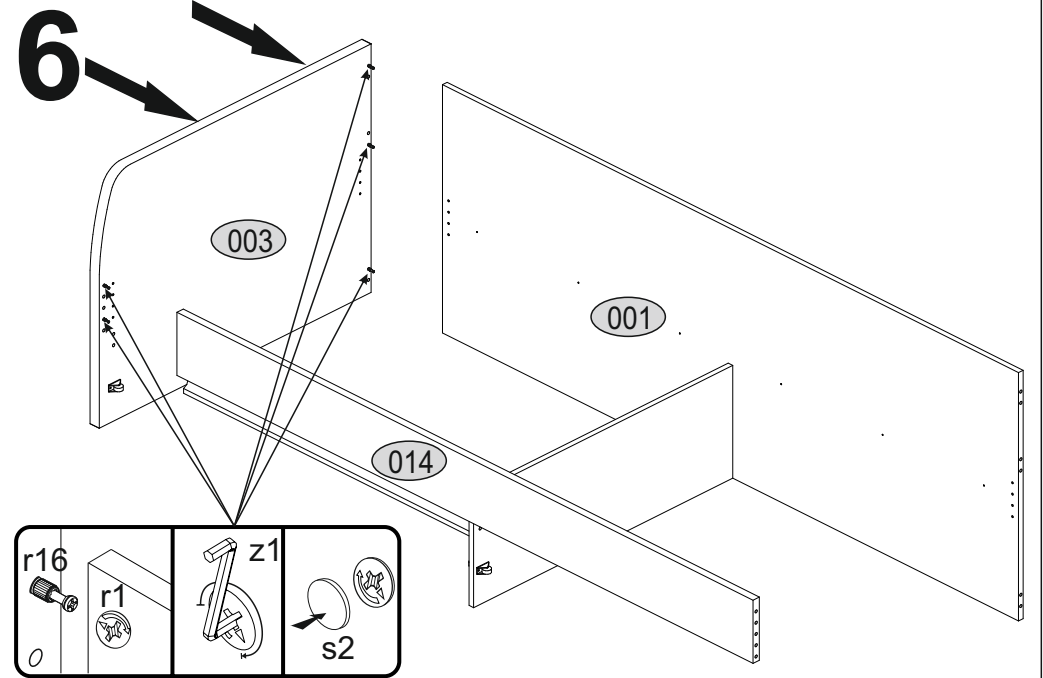


# 7

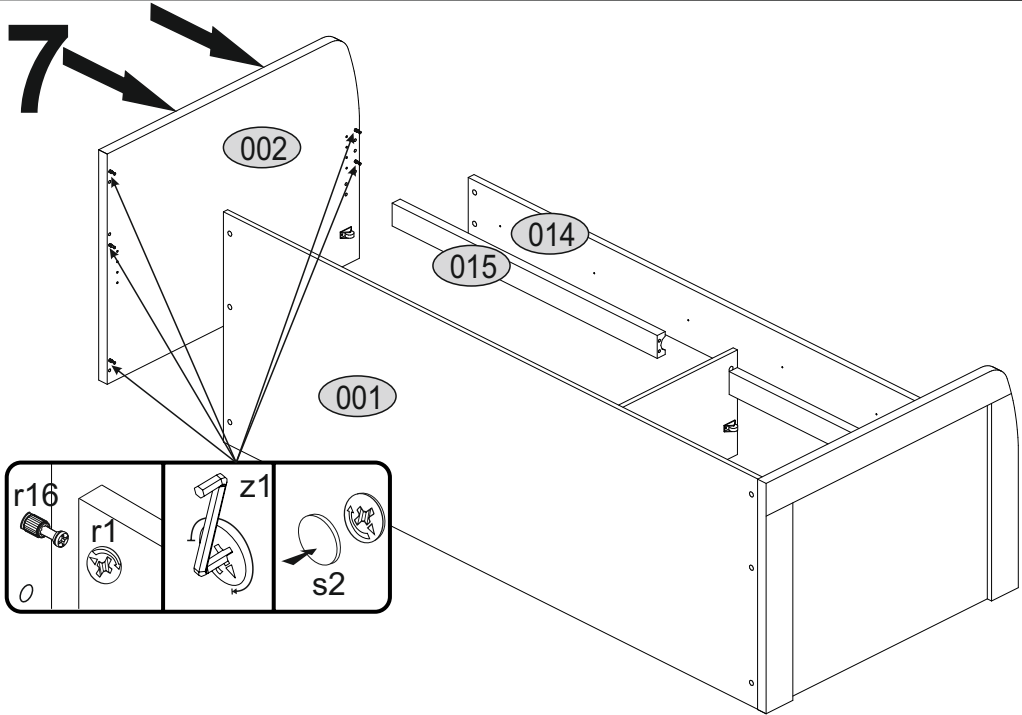


# 8

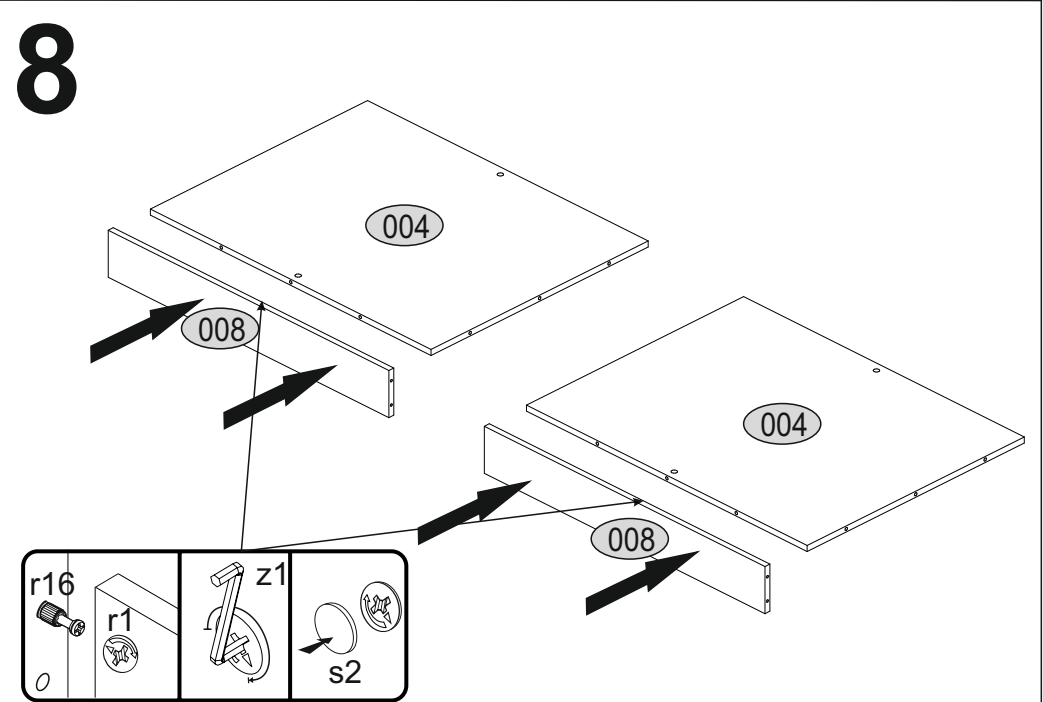


# 9

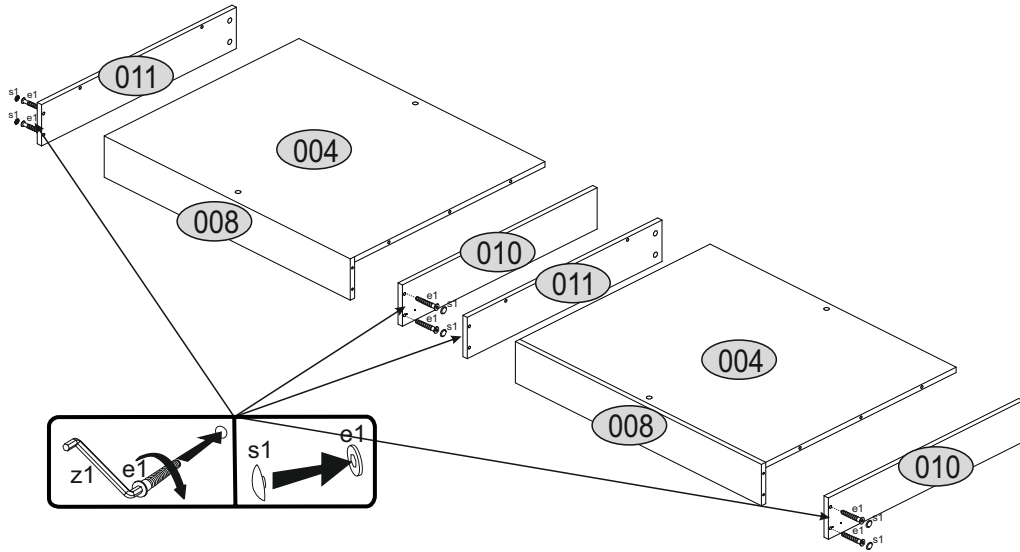


# 10

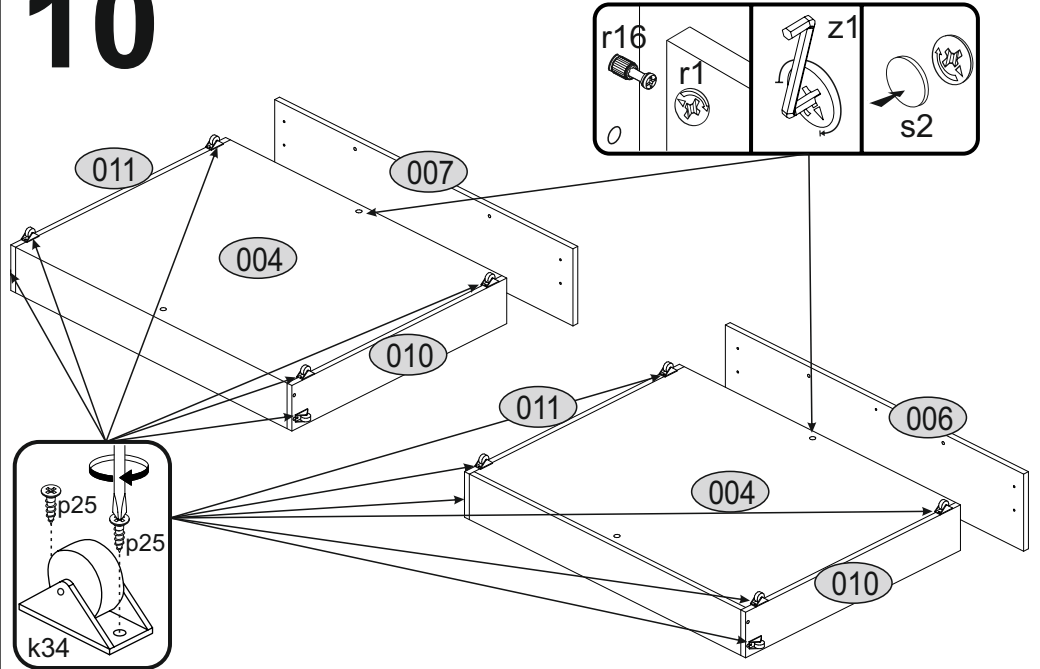

# 11

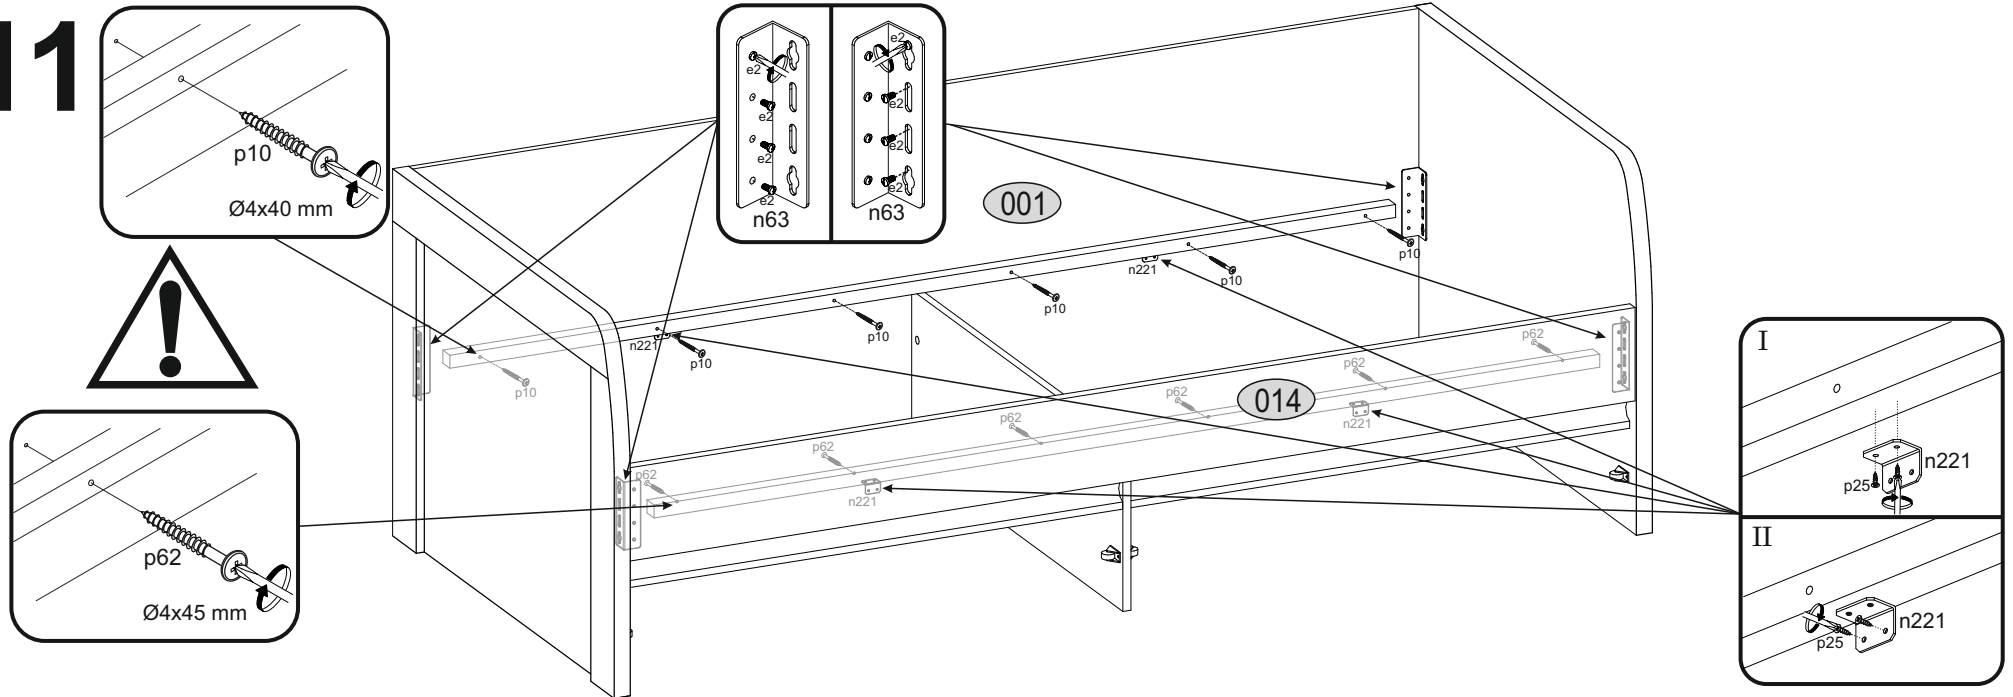

# 12

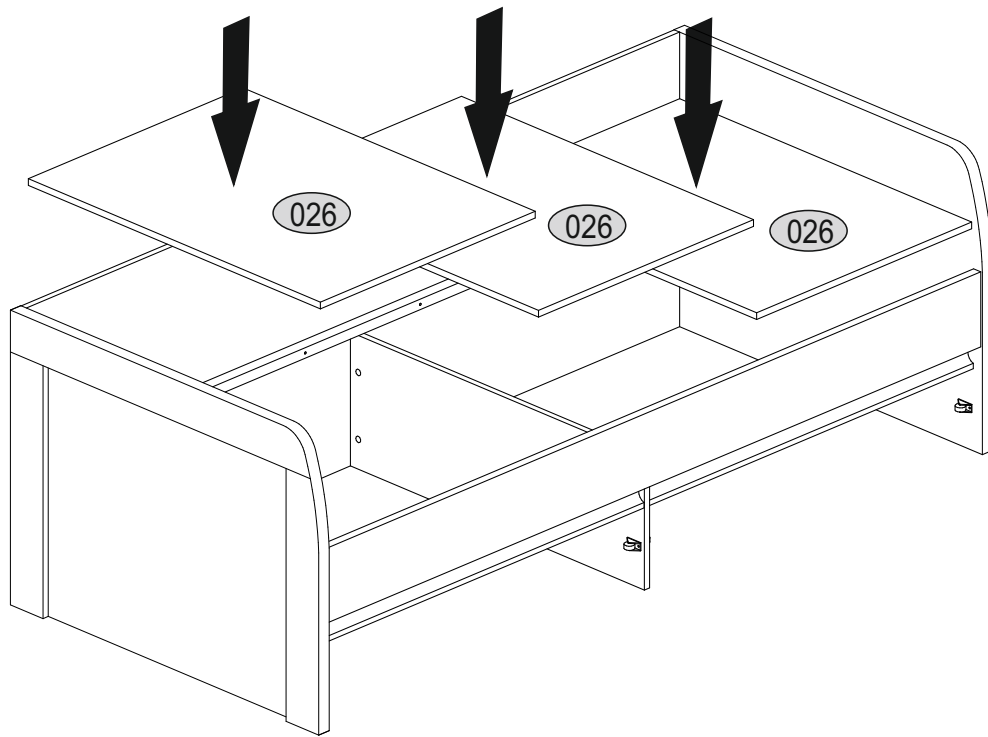

# 13

