

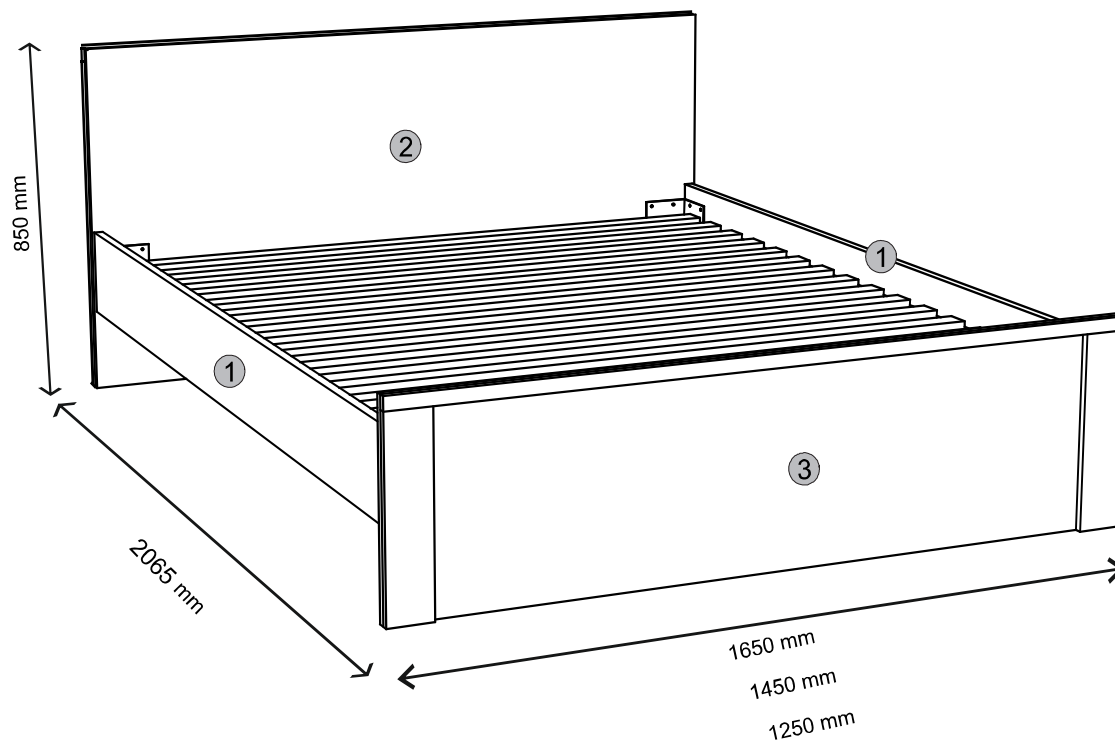
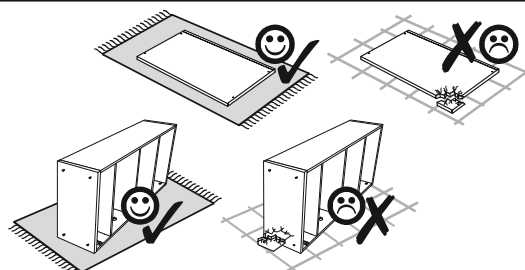


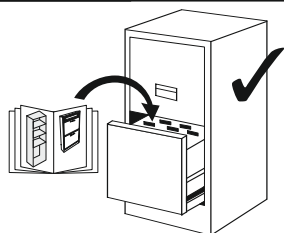

## Instalation manual

NORTON: LOZ\_160\_140\_120

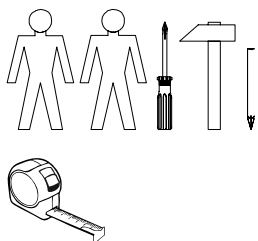

## LOZ\_160


| Element symbol | Dimensions |      |       |   | Code    | Package |
|----------------|------------|------|-------|---|---------|---------|
| 1              | 200        | 2000 | 22    | 2 | NS-101A | 2/2     |
| 2              | 850        | 1654 | 16/32 | 1 | NS-103A | 1/1     |
| 3              | 455        | 1654 | 16/32 | 1 | NS-104A | 1/1     |
| 4              | 1880       | 30   | 25    | 2 |         | 2/2     |
| 5              | 1980       | 70   | 27    | 1 |         | 2/2     |
| 6              | 285        | 70   | 27    | 1 |         | 2/2     |
| 7              | 786        | 2000 | 20    | 2 |         |         |

## LOZ\_140


| Element symbol | Dimensions |      |       |   | Code    | Package |
|----------------|------------|------|-------|---|---------|---------|
| 1              | 200        | 2000 | 22    | 2 | NS-101A | 2/2     |
| 2              | 850        | 1454 | 16/32 | 1 | NS-130A | 1/1     |
| 3              | 455        | 1454 | 16/32 | 1 | NS-131A | 1/1     |
| 4              | 1880       | 30   | 25    | 2 |         | 2/2     |
| 5              | 1980       | 70   | 27    | 1 |         | 2/2     |
| 6              | 285        | 70   | 27    | 1 |         | 2/2     |
| 7              | 686        | 2000 | 20    | 2 |         |         |

## LOZ\_120


| Element symbol | Dimensions |      |       |   | Code    | Package |
|----------------|------------|------|-------|---|---------|---------|
| 1              | 200        | 2000 | 22    | 2 | NS-101A | 2/2     |
| 2              | 850        | 1254 | 16/32 | 1 | NS-132A | 1/1     |
| 3              | 455        | 1254 | 16/32 | 1 | NS-133A | 1/1     |
| 4              | 1880       | 30   | 25    | 2 |         | 2/2     |
| 5              | 1980       | 70   | 27    | 1 |         | 2/2     |
| 6              | 285        | 70   | 27    | 1 |         | 2/2     |
| 7              | 686        | 2000 | 20    | 2 |         |         |

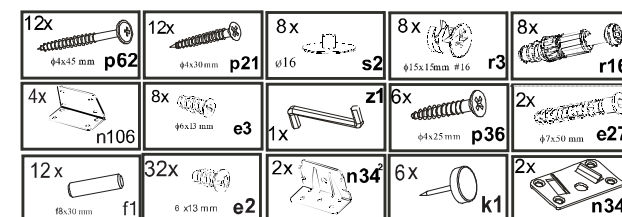


# 1

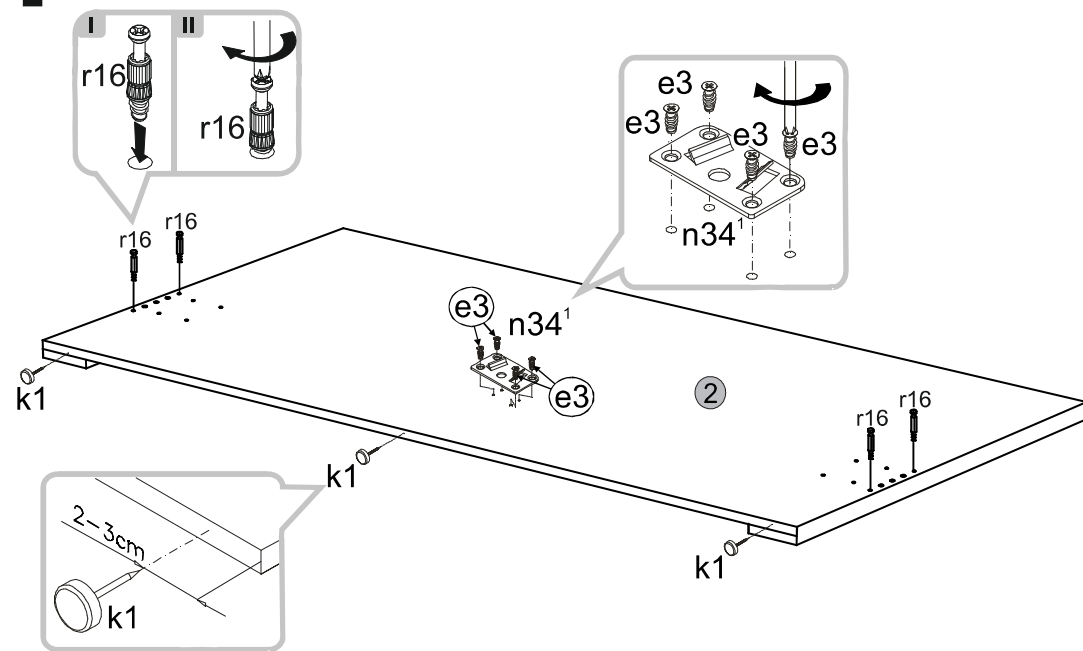

# 3

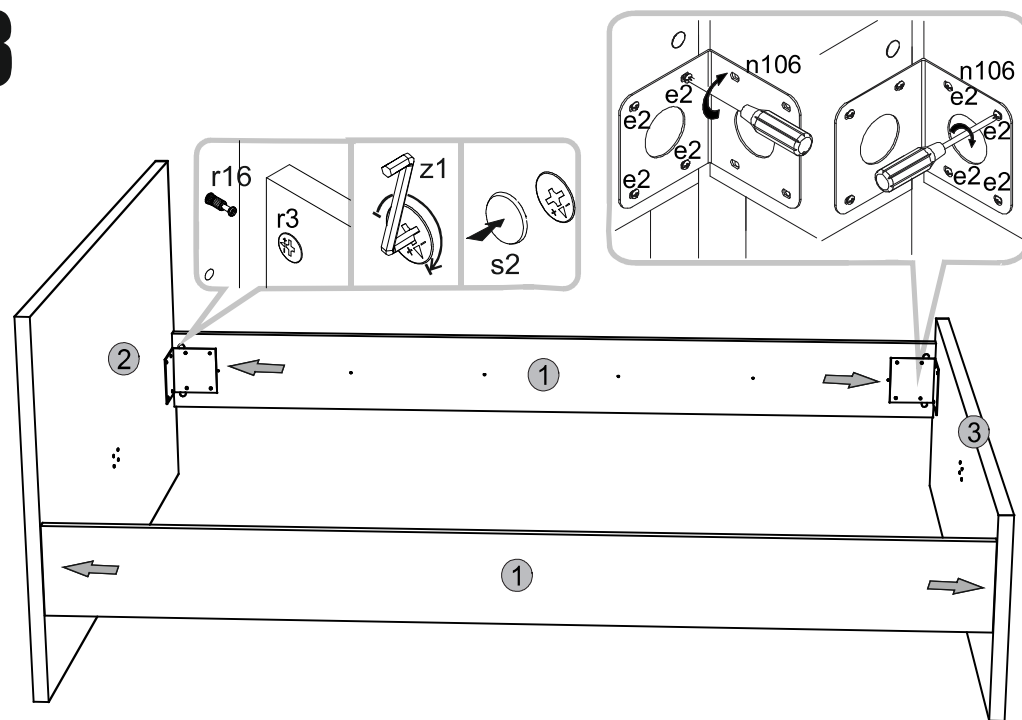

# 2

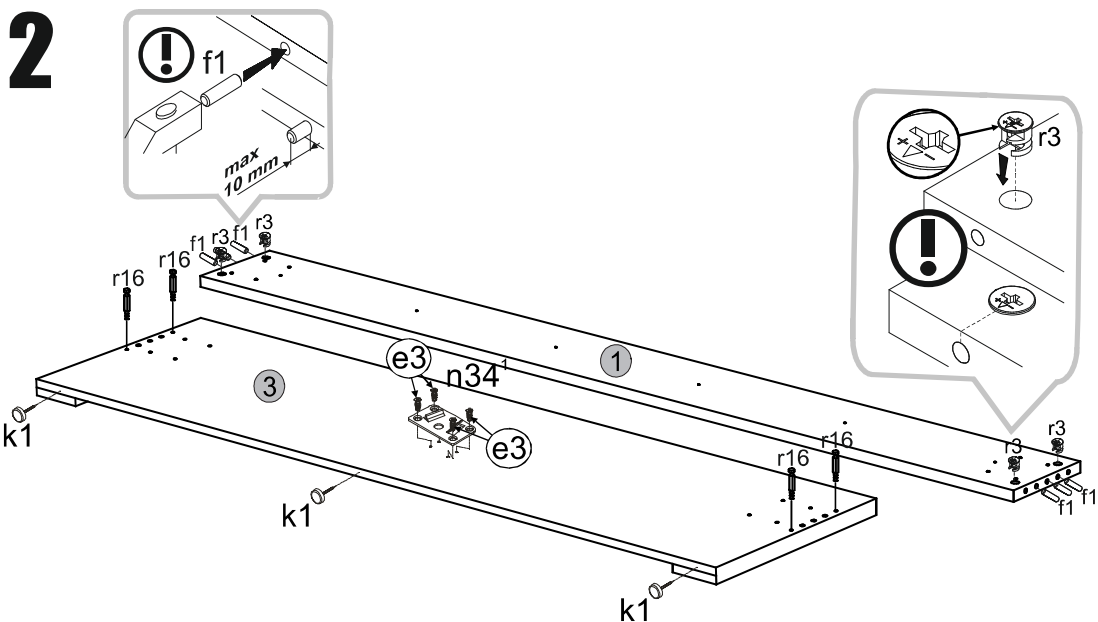

# 4

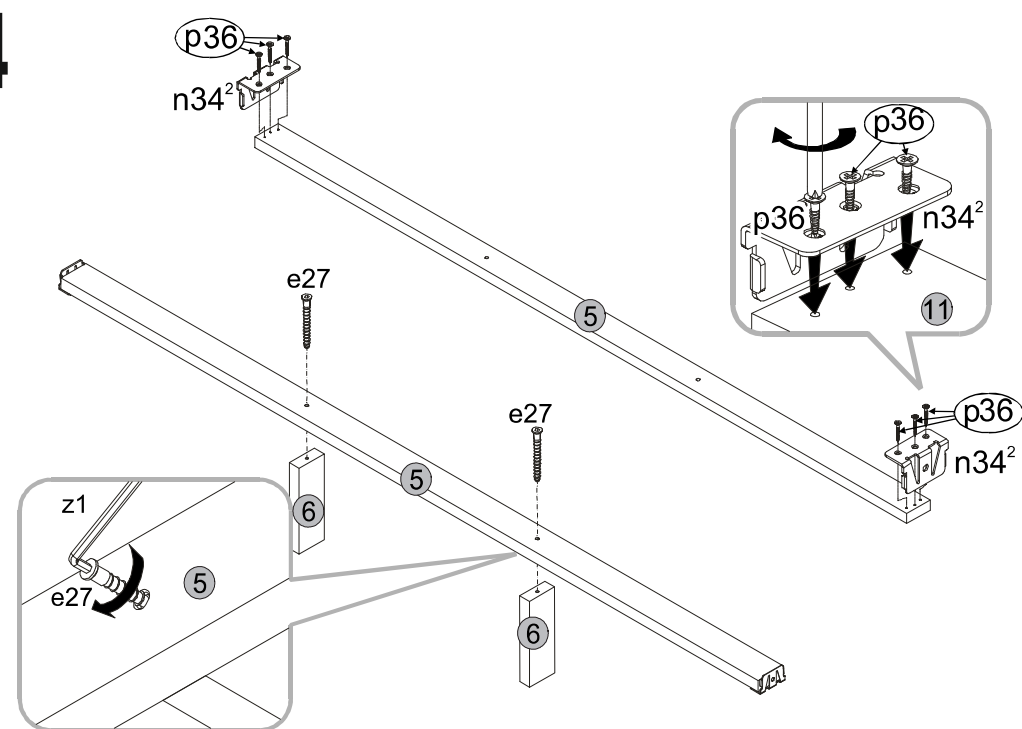


Diagram illustrating the assembly of the bed frame. The main view shows the bed frame with slats and a callout showing a close-up of a slat being secured with a screw labeled 'p21'.

